

# Ricoh L 108

## Time / Date imprinter

posted 8-10-'03

This camera manual library is for reference and historical purposes, all rights reserved.

This page is copyright © by [mike@butkus.org](mailto:mike@butkus.org) M. Butkus, NJ.  
This page may not be sold or distributed without the expressed permission of the producer  
I have no connection with any camera company

On-line camera manual library

This is the full text and images from the manual. This may take 3 full minutes for all images to appear.

If they do not all appear. Try clicking the browser "refresh" or "reload button" or right click on the image, choose "view image" then go back. It should now appear.

To print, try printing only 3 or 4 pages at a time.

[Back to main on-line manual page](#)

**If you find this manual useful, how about a donation of \$3 to:**

**M. Butkus, 29 Lake Ave., High Bridge, NJ 08829-1701**

**and send your e-mail address so I can thank you.**

**Most other places would charge you \$5.50 for a electronic copy or  
\$10.00 for a hard to read Xerox copy.**

**This will allow me to continue to buy new manuals and pay their shipping costs.**

**It'll make you feel better, won't it?**

If you use Pay Pal, use the link below. Use the above address for a check, M.O. or cash.



Venmo is @mike-butkus-camera

[www.PayPal.me/butkus](http://www.PayPal.me/butkus)



- (1) Display panel
- (2) Month indication
- (3) Imprint mark
- (4) Mode selector button
- (5) Selector button
- (6) Set button

### Imprinting mode

#### Examples of date imprinting

(1) 1989 July 21st

(2) 21st 15:59

(3) No imprinting

(4) July 21st, 1989

(5) 21st July, 1989

### Nomenclature of the date imprinting feature

The date imprinting mode can be divided into 5 types; date, time, and no imp printing.

#### Selecting imprinting mode

Each time the Mode selector button is pressed, the display changes as shown below.

- (1) Date (Year/month/day)
- (2) Time (Day/hour/minute)
- (3) No imprinting
- (4) Date (Month/day/year)
- (5) Date (Day/month/year)

#### Checking imprinting

After shooting, the imprint mark-- flickers in the display panel for a few seconds" coeds for correct imprinting. The mark and the letter "M" are not imp printed on the picture.



### Resetting the date and time -

(1) Each time the Selector button is pressed, the flashing digits change in the order of year, month, day, hour, minute and colon (:).

(2) When the digits to be reset flash, press the Set button until the desired digits appear. When the Set button is kept pressed, the digits change rapidly.

### Accurately setting seconds


(1) Press the Mode selector button for Time display mode.

(2) Press the Selector button so that the colon (:) flickers.

(3) Press the Set button according to the radio or telephone time signal. The time count starts from 0 seconds.

· It is recommended that the second digits be adjusted after adjusting the minute digits.

### Battery Replacement -

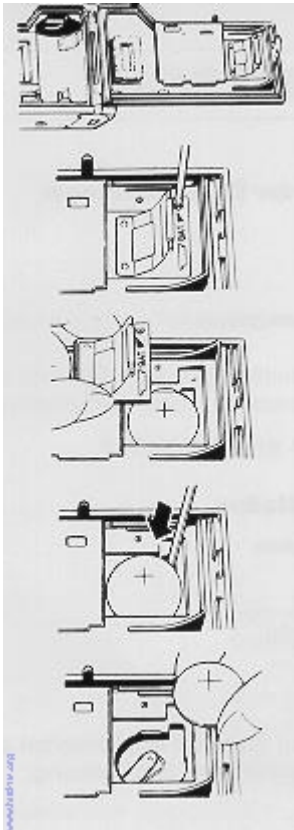

(1) Open the back cover

(2) Remove the screw from the date feature battery compartment cover with a small (+) screwdriver

(3) Remove the battery compartment cover holding the roller section.

(4) Insert the screwdriver tip into the slot on the side of the battery, and lift up the battery.

(5) Load the new battery with the side marked (+) facing upwards. Then, close the battery compartment cover using the (+) screwdriver. (Use lithium battery CR2025. The service life is about 3 years )

· When the battery is exhausted, the imprinted digits become faint. At that time, replace the battery.

· Do not open the date battery compartment lid except when replacing the battery.

· Keep the battery out of reach of children. If a child swallows the battery, contact your doctor immediately