

Ricoh RZ-770

This camera manual library is for reference and historical purposes, all rights reserved.

This page is copyright© by mike@butkus.org, M. Butkus, NJ.

This page may not be sold or distributed without the expressed permission of the producer.

I have no connection with any camera company.

On-line camera manual library

[Back to main on-line manual page](#)

**If you find this manual useful,
how about a donation of \$3 to:**

M. Butkus, 29 Lake Ave.,
High Bridge, NJ 08829-1701
and send your e-mail address
so I can thank you.

Most other places would charge
you \$7.50 for a electronic copy
or \$18.00 for a hard to read Xerox copy.

This will help me to continue to host this site,
buy new manuals, and pay their shipping costs.

It'll make you feel better, won't it ?

**If you use Pay Pal, use the link below.
Use the above address for a check, M.O. or cash.**



www.PayPal.me/butkus

Venmo @mike-butkus-camera Ph. 2083

www.butkus.us



CONTENTS

Locating the Controls	11	Auto-focus shooting	15
Main Features	12	Pre-focus Shooting	15
Before using	12	Auto film rewinding	16
Attaching the Strap	12	Flash photography	16
Inserting the battery	12	Red Eye Reduction Mode '	17
Power Switch and checking the battery	13	Flash-Off Mode	17
Loading the film	13	Using the self-timer	18
Setting the film speed	14	(Optional) Databack settings	18
Holding your camera	14	Proper care of your camera	20
Viewfinder	14	Major specifications	21
Zooming the lens	14		

We are most gratified that you have selected a RICOH camera. Before using your camera, please be sure to read these instructions carefully.

LOCATING THE CONTROLS

(1) Photocell

(2) Self-timer LED

(3) Zoom Button

(4) Film Counter

(5) Manual Film Rewind Button

(6) Shutter Release Button

(7) Strap Holder

(8) Battery Compartment Cover

(9) Red-eye Reduction Lamp


(10) Self-timer Button


(11) Flash-off Button

(12) Built-in Flash

(13) Viewfinder Window

(14) Lens

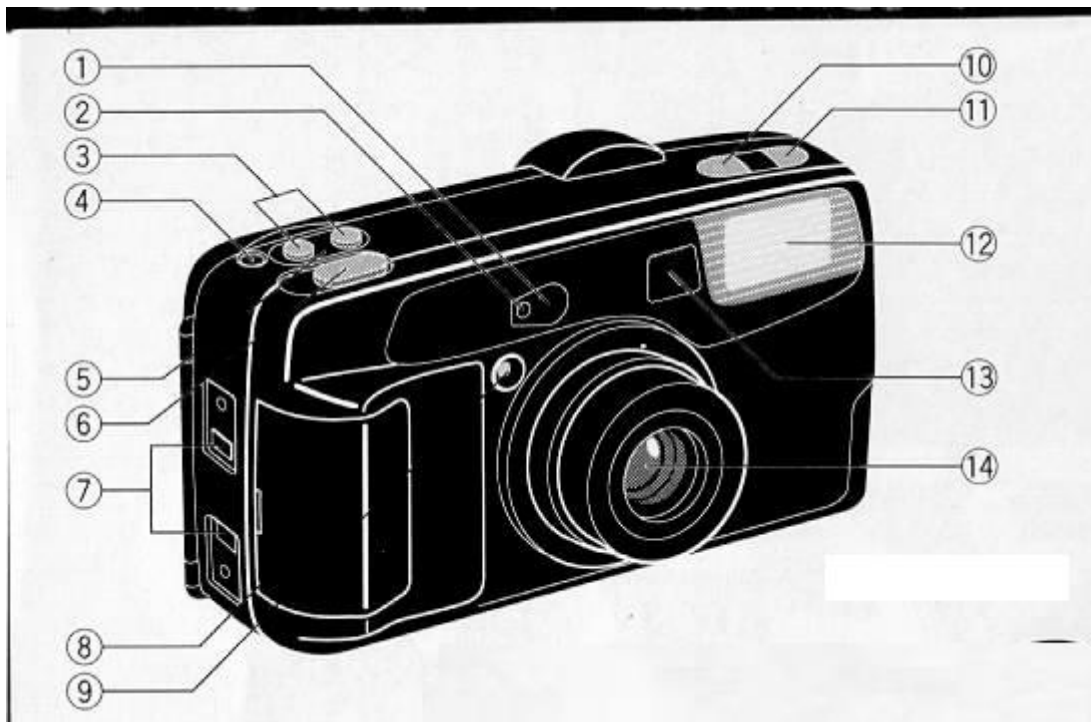

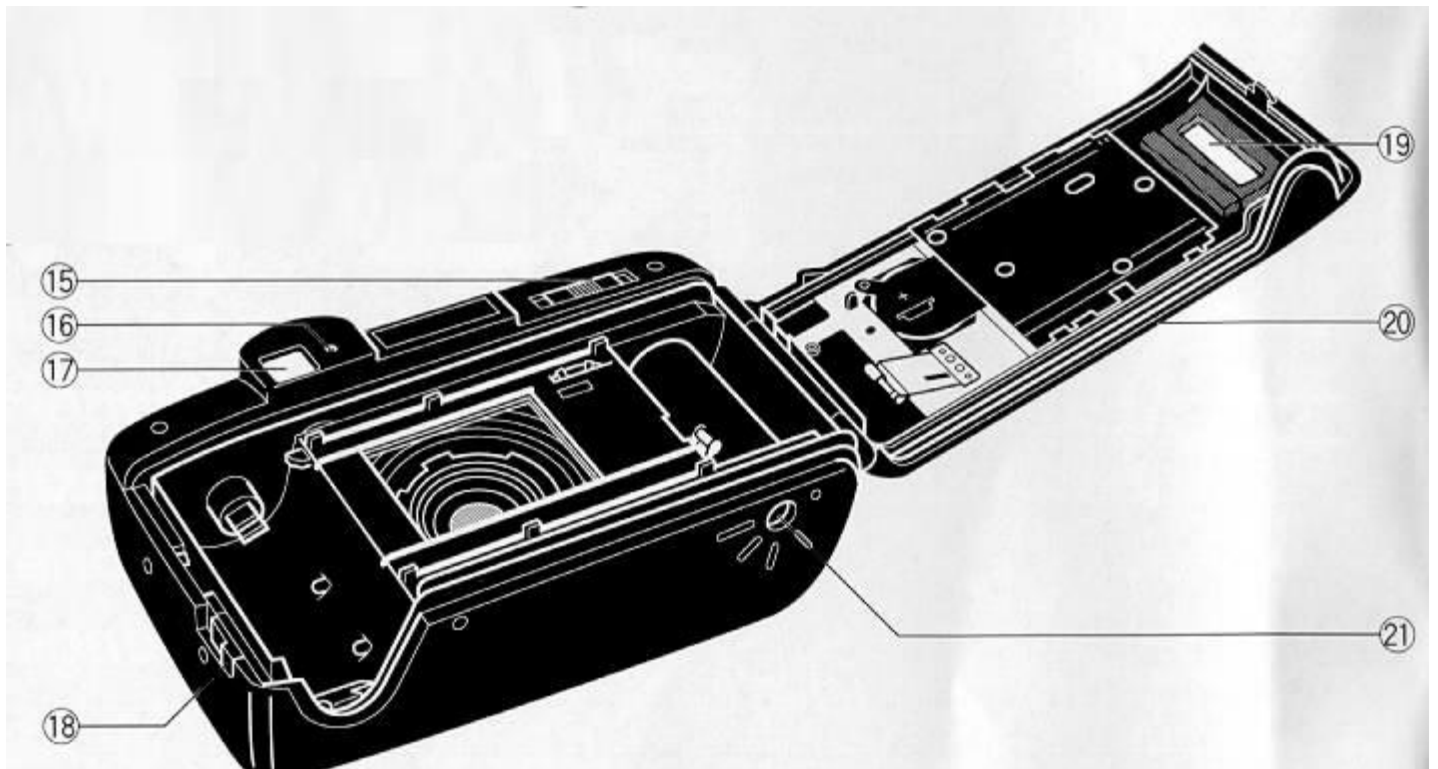

(15) Power Switch

(16) AF/Flash Monitor

(17) Viewfinder

(18) Back Cover Latch

(19) Film Loaded Window

(20) Back Cover

(21) Tripod Socket

Images for figures 1- 64 and examples 1- 8
 Click and print each individual page if needed

MAIN FEATURES

- Fully automatic easy operation
- Light and compact with built-in 35-70 mm zoom lens
- Red Eye Reduction mode
- High power sensor flash
- Flash-off capability

BEFORE USING

- A fast film such as ISO 400 is recommended to prevent blurriness and to obtain a longer flash range.
- Do not hold the camera by the lens.
- Before taking important pictures (at weddings, on trips abroad, etc.) test the camera and learn how it works.

CAUTIONS

- This camera has a high voltage circuit. Because it is dangerous, do not attempt to take the camera apart.
- If the built-in flash does not operate, do not touch the internal parts of the camera, as it contains a high voltage circuit. Take the camera to the shop where it was purchased, or to your nearest Ricoh service center.

ATTACHING THE STRAP

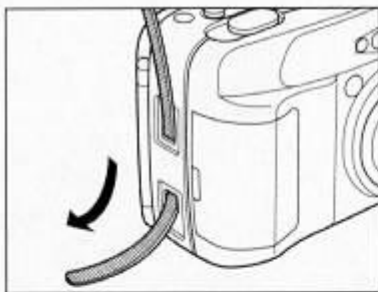


Fig. 1 Abb. 1 圖 1

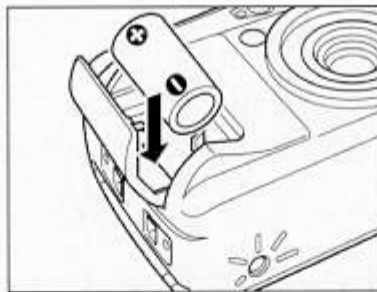


Fig. 4 Abb. 4 圖 4

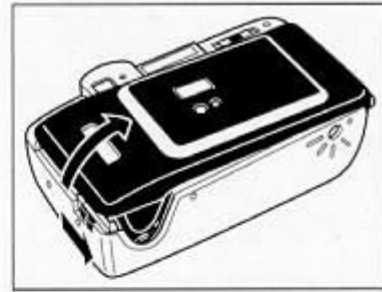


Fig. 7 Abb. 7 圖 7

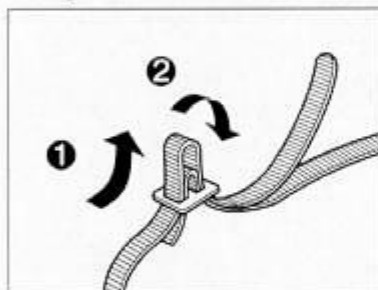


Fig. 2 Abb. 2 圖 2

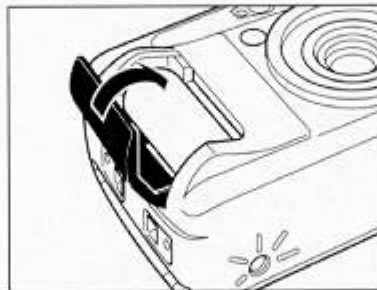


Fig. 5 Abb. 5 圖 5

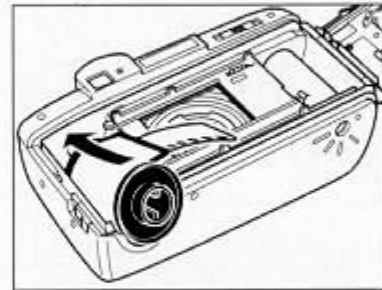


Fig. 8 Abb. 8 圖 8

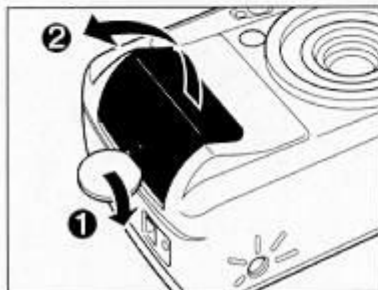


Fig. 3 Abb. 3 圖 3

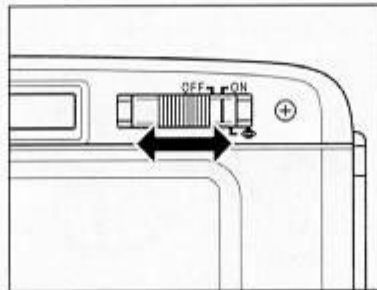


Fig. 6 Abb. 6 圖 6

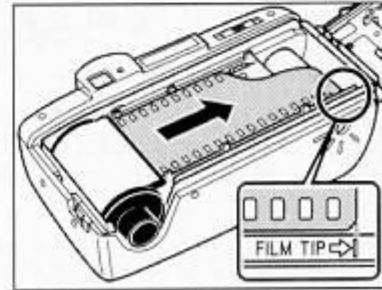


Fig. 9 Abb. 9 圖 9

1. Run the strap through the camera's strap holder. (Fig. 1)

2. Pass the strap through the buckle as in Fig. 2.

INSERTING THE BATTERY

The camera will not operate unless the battery is installed. It is important to make sure that the battery is installed correctly.

1. To open the Battery Compartment Cover, first slide it in the direction of the arrow using a coin, etc. (Fig. 3)

2. Insert the 3 volt lithium battery (CR-123A or DL1 23A), checking that + and -- on the battery are aligned according to polarity diagram inside the battery compartment. (Fig. 4)

3. Close the Battery Compartment Cover in the direction of the arrow, and push it down. (Fig. 5)

Recommended. Replacement 3 V Lithium Batteries Include:

Lithium battery (3V)

Panasonic CR-1 23A

Duracell XL DL-123A

POWER SWITCH & CHECKING THE BATTERY POWER SWITCH

Each time you slide the Power Switch in the direction of the arrow, it switches from OFF, ON, and vice versa. (Fig. 6)

The lens moves from the Storage Position to the Wide Angle Position, and the camera sets everything automatically.

CHECKING THE BATTERY

* If the battery voltage is insufficient, the shutter may not release or the film may not advance completely. In the following cases, replace the battery: 1) Turning on the Main Switch, zoom lens doesn't move to the "Wide" position.

- 2) While pressing the Flash OFF Button, press the Shutter Release Button halfway.
If the AF/Flash Monitor next to the viewfinder blinks, it is necessary to replace the battery.

LOADING THE FILM

Always avoid direct sunlight when loading the film.

1. Push the Back Cover Latch Downward to open. (Fig. 7)

2. Load the film cassette into the Film Chamber and pull out enough film leader to extend past the mark of the film tip index.
(Fig. 8, 9)

* If there is any dust on the inside lens surface, use a blower to blow the dust away.

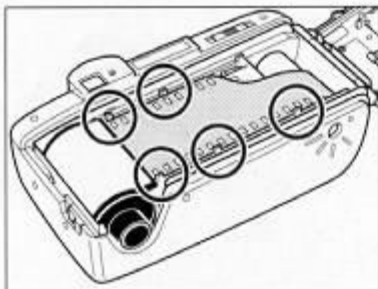


Fig. 10 Abb. 10 圖10

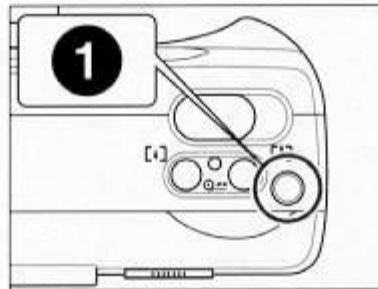


Fig. 12 Abb. 12 圖12



Fig. 15 Abb. 15 圖15

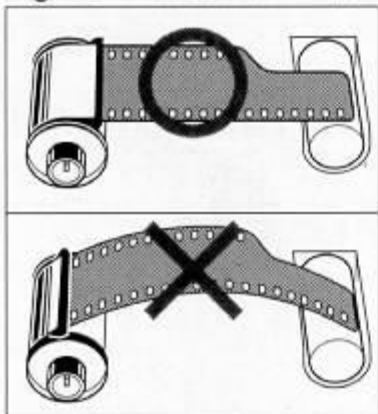


Fig. 11 Abb. 11 圖11

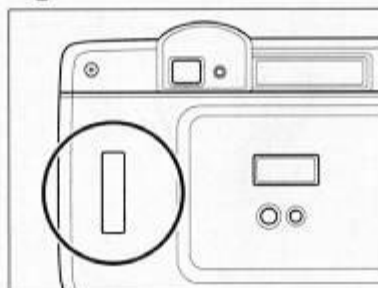


Fig. 13 Abb. 13 圖13



Fig. 16 Abb. 16 圖16

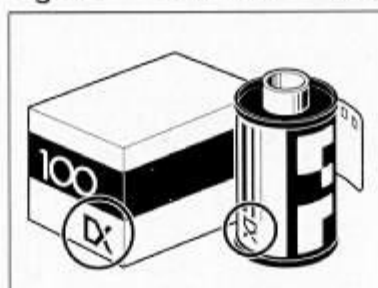


Fig. 14 Abb. 14 圖14



Fig. 17 Abb. 17 圖17

3. Make sure the film stays within the Film Guides and lies flat. (Fig. 10,11)

4. Press the Back Cover shut so that the Back Cover Latch returns to its original position. The film is automatically advanced until number "1" appears in the Film Counter. (Fig. 12)

5. If number 1 does not appear in the Film Counter, the film has not advanced properly. Reload the film by following steps 1--4 shown above.

* The shutter will release even if the film has not been loaded properly. Therefore, make sure "1 " is displayed in the Film Counter before shooting.

* Whether there is film in your camera or not can be confirmed by the Film Loaded Window. (Fig. 13)

* You can confirm that the Film-Wind or Rewind is working properly by observing the Exposure Counter.

SETTING THE FILM SPEED

DX-coded film cassettes have black-and-silver patterns corresponding to film speeds that the camera reads and automatically sets. Your camera accepts DX films with speeds ranging from ISO 100 or 400. (Fig. 14)

* To increase flash shooting range, use higher speed film such as ISO 400.

When using DX-coded films, setting the film speed is not necessary. Your camera automatically sets the correct film speed.

When using a film without a DX code, your camera will automatically set itself to ISO 100.

When the film speed is more than ISO 400 set to ISO 400. When it is less than ISO 400, set to ISO 100.

HOLDING YOUR CAMERA

1. Always use both hands to steady your camera. (Fig. 15)

* When holding the camera vertically always position it with the flash at the top. (Fig. 16)

* Be careful not to place your fingers over the lens, flash or photocell. (Fig. 17)

* If the camera moves during the exposure, the whole picture will be blurred. To help insure sharp pictures, hold the camera steadily and properly.

VIEWFINDER (Fig. 18)

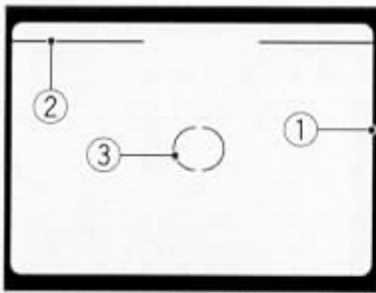


Fig. 18 Abb. 18 圖18

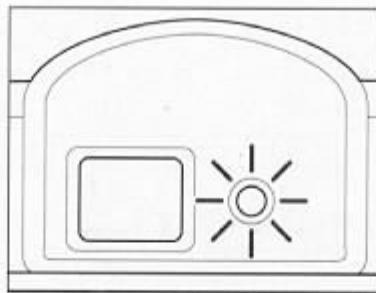


Fig. 21 Abb. 21 圖21



Fig. 24 Abb. 24 圖24

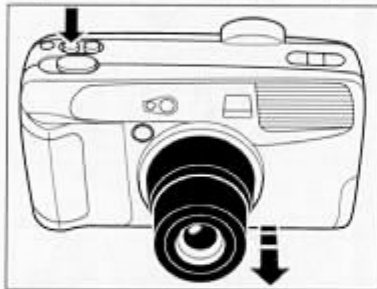


Fig. 19 Abb. 19 圖19



Fig. 22 Abb. 22 圖22

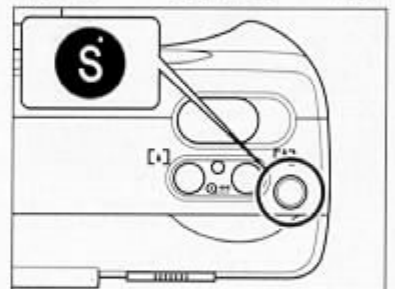


Fig. 25 Abb. 25 圖25

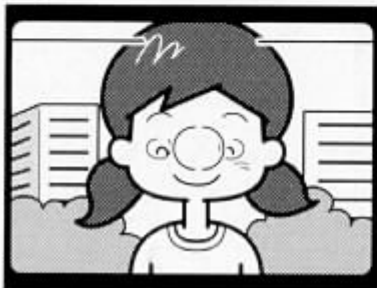


Fig. 20 Abb. 20 圖20

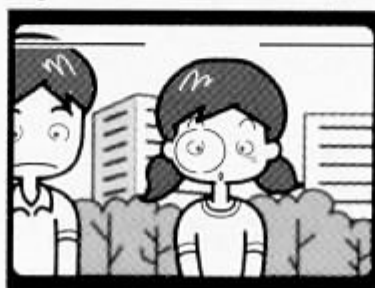


Fig. 23 Abb. 23 圖23

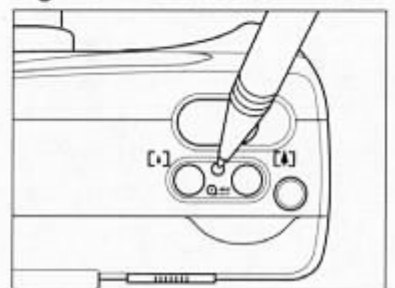


Fig. 26 Abb. 26 圖26

(1) Field of View Frame

The subject (such as people or scenery) you wish to photograph should be contained within this frame.

(2) Parallax Correction Marks

When taking a picture of a subject that is between 1.2 m-1.5 m (4 ft.-4.9 ft.) away from your camera the subject should be positioned within these marks. Anything outside the marks will not be included in the picture even if you can see it through the viewfinder.

(3) Auto Focus Mark

The Auto-Focus system focuses automatically on any subject that appears within this AF mark.

ZOOMING THE LENS

The built-in 35-70 mm zoom lens lets you get closer to your subject without changing your position. This lets you easily select the composition that best suits your subject.

To zoom the lens, just press either of the zoom buttons (Fig. 19) until your subject is framed properly.

* When zooming the lens, keep your fingers away from the moving lens components.

AUTO-FOCUS SHOOTING

1. Set the subject you wish to take within the AutoFocus Mark in center of the Viewfinder. (Fig. 20)

2. When you press the Shutter Release Button halfway, the AF/Flash Monitor will light up. (Fig. 21) Focus and exposure are locked.

3. Gently press the Shutter Release Button down to take the picture. The film will advance automatically as soon as the shutter has been released.

* The shutter will not release when the AF/Flash Monitor is blinking, as the flash is charging during this time.

* Avoid pressing the Shutter Release Button too abruptly to avoid camera shake or possible misoperation.

* There may be rare cases when accurate focusing is difficult or impossible. (For instance, with dark subjects that do not reflect light well, glossy subjects, or subjects taken through glass.) In these cases, it is best to use the Pre-Focus technique (see next section) to "lock" the focus on a more "normal" subject at the same distance. While holding focus, turn your camera back to the original subject and shoot. (See PRE-FOCUS SHOOTING for more details.)

* The minimum shooting distance of this camera is 1.2 m (4 ft.). However, the shutter will release even if you are closer than this distance. Blurred pictures are more likely to occur in telephoto (70 mm), so be careful when taking pictures.

PRE-FOCUS SHOOTING

When the subject you wish to focus on is not located within the Auto-Focus Frame or is difficult to focus on, you should use pre-focus shooting.

When the subject is not within the Auto-Focus Frame:

1. If you want to photograph two or more people, there may be cases where none of your main subjects can be within the Auto-Focus Frame in the center of the Viewfinder. If you release the shutter then, only the background will be in focus, and the people, who are the main subject, will be out-offocus. (Fig. 22)
2. Move the camera to one side so that one of the subjects is within the Auto-Focus Mark. Press the Shutter Release Button halfway so that the AF/Flash monitor lights up. Keep holding your finger halfway down on the Shutter Release Button. (Fig. 23)
3. Now return the camera to its original position so that your main subjects are in the Field of View Frame again, and press the Shutter Release Button fully to take the picture. (Fig. 24)

When the subject is difficult focus on:

1. When you are photographing subjects that are difficult to focus on (such as a black dog, glossy surface or behind glass, Insubstantial matter, such as a flame or smoke. Nonreflective objects, such as hair. Very small objects.), find another subject at the same distance from the camera. You can prefocus on that subject in the same way as described above.

* When you remove your finger from the shutter Release Button, the pre-focus setting is cleared, so that you can pre-focus again as many times as you wish.

AUTO FILM REWINDING

1. After the end of the film has been reached, the film is automatically rewind.
2. You will see the film rewind by returning film counter.
3. When the film is fully rewind, the motor stops automatically and "S" appears in the Film Counter Window, you can now open the Back Cover to unload the film. (Fig. 25)

* If you wish to rewind the film before the end of the film is reached, push the Manual Film Rewind Button with a pen, etc.
(Fig. 26)

* Don't open the Back Cover and remove the film forcibly before ending the film, it may cause the malfunction of the winding mechanism.

* Be careful not to touch the inner lens with your fingers or the edge of film.

FLASH PHOTOGRAPHY

1. If additional light is required, the built-in Flash automatically activates.

* Recommended Flash Shooting Range

(ISO 100)

Wide-angle: 1.2 m-about 3.9 m (4.0 ft.-12.9 ft.)

Telephoto: 1.2 m-about 2.1 m (4.0 ft.-6.9 ft.)

(ISO 400)

Wide-angle: 1.2 m-about 7.8 m (4.0 ft.-25.7 fl.)

Telephoto: 1.2 m-about 4.2 m (4.0 ft.-13.8 ft.)

* To increase shooting range, use higher speed film such as ISO 400.

2. When the Flash is still charging, the Green AF/ Flash Monitor will blink fast and the shutter will be locked. Wait until the Green AF/Flash Monitor turns on in order to use the flash.

RED EYE REDUCTION MODE

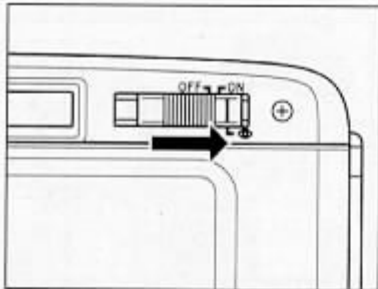


Fig. 27 Abb. 27 圖27

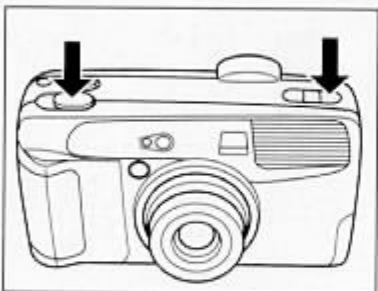


Fig. 28 Abb. 28 圖28

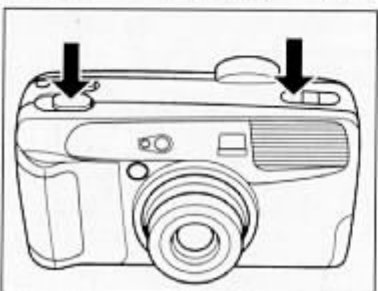


Fig. 29 Abb. 29 圖29

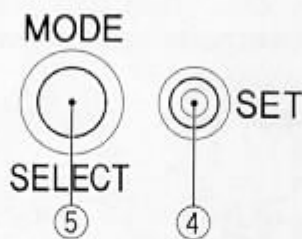
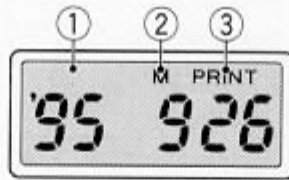


Fig. 30 Abb. 30 圖30

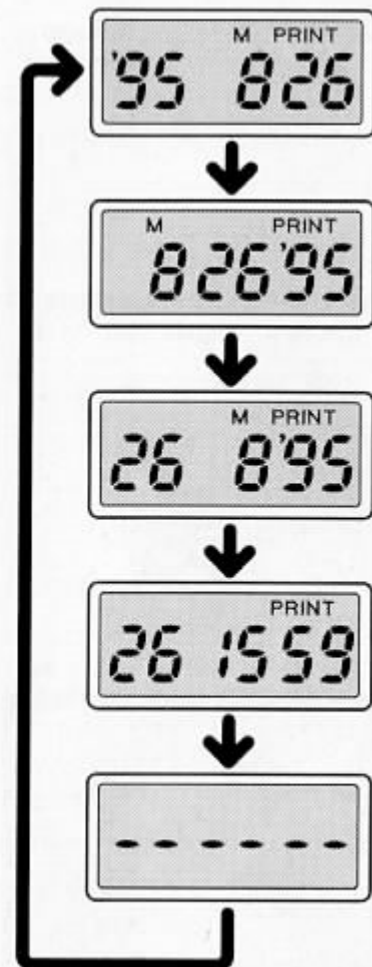


Fig. 31 Abb. 31 圖31

Minimizing the Red-Eye Effect

Selecting this mode makes it possible to minimize the red-eye effect that sometimes occurs when taking portrait photographs with flash. This makes it easy for anyone to take natural-looking portraits of people.

1. Slide the Power Switch to the Red-eye Reduction mode, then press the Shutter button gently. (Fig. 27) The Red-eye Reduction Lamp will light. After a brief delay, the flash will fire, and the shutter will be released. The entire sequence will take about one second.

* Be sure to hold the camera still after pressing the Shutter Release Button until the full cycle is complete and the shutter is released.

* You may wish to advise your subjects to wait until the above operation is complete.

FLASH-OFF MODE

This mode forcibly prevents automatic firing of the flash, thus allowing available light photography in museums, churches, etc. where flash photography is prohibited.

While pressing the Flash OFF button, press the Shutter Release Button. (Fig. 28)

* In dim light, the camera's Shutter speed will be automatically reduced. Take particular care in Telephoto (70 mm) Mode. To prevent a blurry picture, hold the camera steadily and press the Shutter Release Button gently.

* To prevent blurry pictures from slow shutter speeds, we recommend the use of a tripod.

USING THE SELF-TIMER

1. While pressing the Self-timer Button, press the Shutter Release Button. The Self-timer LED on the front of the camera will light for approximately 7 seconds. Then, the LED will blink for about 3 seconds to indicate that the shutter release soon. After a total of about 10 seconds have elapsed, the shutter will release. (Fig.29)

2. When the self-timer begins, focus and exposure are locked.

* The self-timer will not operate while the flash is charging.

* If you wish to cancel the self-timer once it has started, slide the Power Switch to "OFF".

Using the Self-timer for Flash Photography:

When the Self-timer Button is pressed the Flash Unit will work automatically if there is insufficient light.

Using the Self-timer without flash

If you wish to shoot without the flash, keep both the Flash OFF button and the Self-timer button pressed when pressing the Shutter Release Button.

(OPTIONAL) DATABACK SETTINGS

Nomenclature of the date imprinting feature (Fig. 30)

- (1) Display panel
- (2) Month indication
- (3) Imprint mark
- (4) Set button
- (5) Mode/Select button

Imprinting mode - Examples of date imprinting (Fig.31)

- (1) 1995 August 26th
- (2) August 26th, 1995
- (3) 26th August, 1995
- (4) 26th 15:59
- (5) No imprinting

Selecting imprinting mode

Each time the Mode/Select button is pressed, the display changes as shown below. (Fig. 31)

- (1) Date (Year/month/day)
- (2) Date (Month/day/year)
- (3) Date (Day/month/year)
- (4) Time (Day/hour/minute)
- (5) No imprinting

Checking imprinting

After shooting, the imprint mark "PRINT" blinks in the display panel for a few seconds for correct imprinting.

The mark and the letter "M" are not imprinted on the picture.

Resenting the date and time



Fig. 32 Abb. 32 圖32

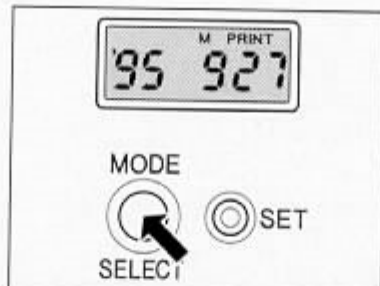 


Fig. 35 Abb. 35 圖35



Fig. 38 Abb. 38 圖38

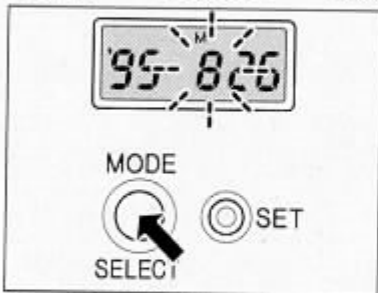 


Fig. 33 Abb. 33 圖33

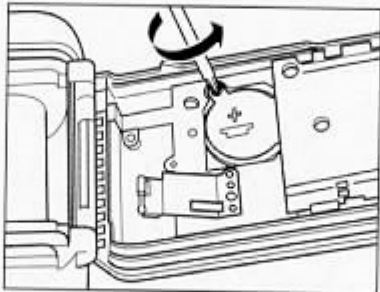


Fig. 36 Abb. 36 圖36



Fig. 39 Abb. 39 圖39

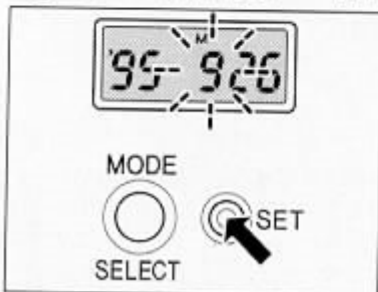


Fig. 34 Abb. 34 圖34

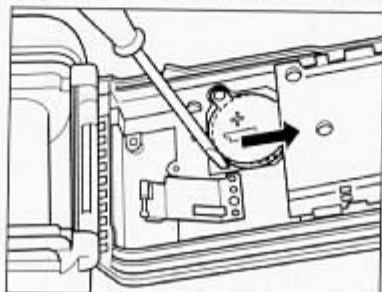


Fig. 37 Abb. 37 圖37



Fig. 40 Abb. 40 圖40

1. Press and hold the Mode/Select Button for more than 2 seconds until the year digits flash. (Fig. 32)
2. When the Mode/Select Button is pressed, the flashing digits change in the order of year, month, day, hour and minute. (Fig. 33)

3. When the digits to be reset flash, press the Set Button until the desired digits appear. When the Set Button is kept pressed, the digits change rapidly. (Fig.34)

4. When you have finished resetting the date and time, press the Mode Button. The Print mark appears in the display panel. (Fig. 35)

Battery Replacement

1. Open the back cover.

2. Remove the screw from the databack battery compartment cover with a small (+) screwdriver. (Fig. 36)

* Use a pointed instrument to slide the battery in the direction of the arrow to the dotted line position, to push it out. (Fig.37)

3. Load the new battery with the side marked (+) facing upwards. Then, close the battery compartment cover using the (+) screwdriver. (Use lithium battery CR2025. The service life is about 3 years.)

* When the battery is exhausted, the imprinted digits become faint. At that time, replace the battery.

* Do not open the date battery compartment lid except when replacing the battery

* Keep the battery out of reach of children. If a child swallows the battery, contact your doctor immediately.

Notes the date imprinting feature

* At temperatures of below 0°C (32°F), the battery performance deteriorates. The date imprinting feature may not function correctly and imprinting may become impossible.

* When the battery is replaced, the display panel sometimes displays the wrong digits. Reset the digits for correct indication.

* The date is sometimes illegible if it is imprinted on the following objects.

(1) "Warm"-colored objects, such as red, yellow, orange, etc.

(2) Objects with details similar in size to the imprinted date (gravel, leaves, etc.)

(3) Bright objects such as the sky, a white wall, etc. * Imprinting is not possible during the following modes.

(1) Print off mode

(2) Reset mode

PROPER CARE OF YOUR CAMERA

* If there is dirt on the lens and in the camera body, do not attempt to remove it with your fingers. Use a blower to blow the dust away, or wipe the surface gently with camera lens tissue or a soft cloth. (Fig. 38)

* Camera malfunction can be caused by impact, humidity, salt etc. After using the camera at the beach or places where there is salt spray, high humidity or chemicals, wipe it off carefully. (Fig. 39)

* Take care not to expose the camera to sudden changes in temperature, as that may cause condensation on the lens and film or inside the body, or other malfunctions. (Fig. 40)

* Do not expose the camera for a long period of time to extremely high temperatures, such as in your car or on the beach, as this may ruin your film, or cause other malfunctions. (Fig. 41)

* When using a tripod, do not try to force a long screw into the socket. The screw length should be less than 5.7 mm (1/4 inch). (Fig. 42)

* Do not place the camera near equipment that has strong magnetic fields such as a television or radio. (Fig. 43)

MAJOR SPECIFICATIONS

Type: Fully automatic 35 mm autofocus lens shutter camera with built-in zoom lens

Lens: 35 mm f5.0-70 mm f9.5 zoom lens 6 elements 5 groups

Focusing: Active type auto focus 1.2 m (4 fl.)-inf.

Shutter: Programmed Electronic shutter: 1/5-1/250 sec.

Selftimer: Electronic type with LED indicator. Operating delay approx. 10 sec. 7 see LED lights and 3 see LED blinks

Viewfinder: Real image zoom viewfinder Mag. x 0.33-0.58, Field of view about 83%

Exposure Adjustment: Programmed AE with CdS cell Coupling range EV8.0-15.0 (ISO 100)

Film Speed: ISO 100, 400. Compatible with DX code system.

Film Load/Wind/Rewinding: Ricoh auto-load system. Automatic 1st frame set. Automatic film rewind at the end of film. Mid-roll rewind is possible.

Exposure Counter: Mechanical, Additive

Built-in Flash: Electronic flash automatically activates in dim light

Flash off possible

Red eye reduction by lamp

Flash Range: ISO 100 Negative film
(Wide) 1.2 m-3.9 m (4 fl.-12.9 fl.)

(Tele) 1.2 m-2.1 m (4 ft.-6.9 ft.)

ISO 400 Negative film

(Wide) 1.2 m-7.8 m (4 ft.-25.7 ft.)

(Tele) 1.2 m-4.2 m (4 fl.-13.8 fl.)

Flash Recycle time: About 7 sec.

Power Source: 3 V lithium battery x 1. CR1 23A or equivalent

Dimensions: 126 mm (W) x 69 mm (T) x 44 mm (D), 5.0 in. (W) x 2.7 in. (H) x 1.7 in (D)

Weight: 270 g (9.5 oz.) without battery