

Ricoh RZ-900

This camera manual library is for reference and historical purposes, all rights reserved.

This page is copyright© by mike@butkus.org, M. Butkus, N.J.

This page may not be sold or distributed without the expressed permission of the producer
I have no connection with any camera company.

**If you find this manual useful,
how about a donation of \$3 to:**

M. Butkus, 29 Lake Ave.,
High Bridge, NJ 08829-1701
and send your e-mail address
so I can thank you.

Most other places would charge
you \$7.50 for a electronic copy
or \$18.00 for a hard to read Xerox copy.

This will help me to continue to host this site,
buy new manuals, and pay their shipping costs.

It'll make you feel better, won't it ?

**If you use Pay Pal, use the link below.
Use the above address for a check, M.O. or cash.**



www.PayPal.me/butkus

Venmo @mike-butkus-camera Ph. 2083

[To main camera manual site](#)

www.butrkus.us




CONTENTS

Attaching the strap 16	Using the self timer 23
Inserting the battery 16	Creative modes 24
Opening the viewfinder cover 16	Red eye reduction/Soft-flash mode 25
Checking the battery 17	Flash-off mode 26
Loading the film 18	Flash-on mode 26
Setting the film speed 19	TV mode 27
Homing your camera 19	Single AF mode (Pre-focus shooting) 27
Viewfinder 19	Super macro 28
Zooming the lens 20	Electronic remote control socket 29
Multi auto focus 20	(Optional) Databack settings 29
Rewind the film (Auto reverse) 21	Proper care of your camera 31
Flash photography 22	Major specifications 32
Auto backlight control/Auto fill in flash 22	
Auto night photography 22	


We are most gratified that you have selected a RICOH camera. Before using your camera, please be sure to read these instructions carefully.

LOCATING THE CONTROLS

1. Distance Measuring Windows
2. Shutter Release Button
3. Zoom Switch
4. Super Macro Button
5. Strap Holder
6. Lens Shield
7. Self-timer LED
8. Built-in Flash
9. Photocell

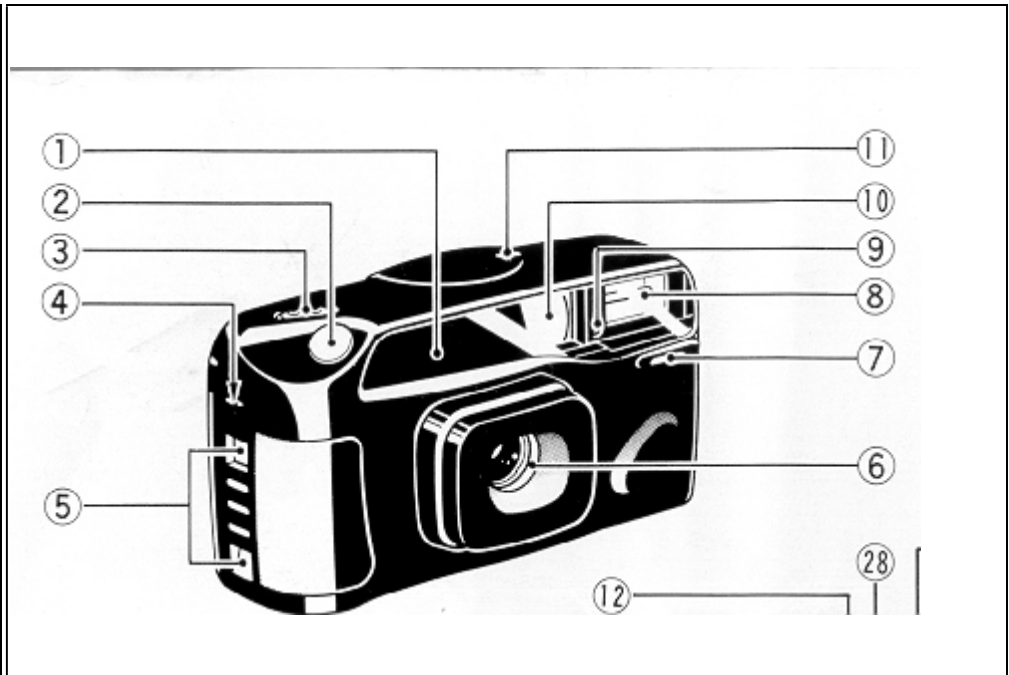

10. Viewfinder Window
11. Self-timer Button
12. AF Monitor
13. LCD Panel
14. Mode Button
15. Manual Film Rewind Button
16. Remote Control Socket
17. Back Cover Latch

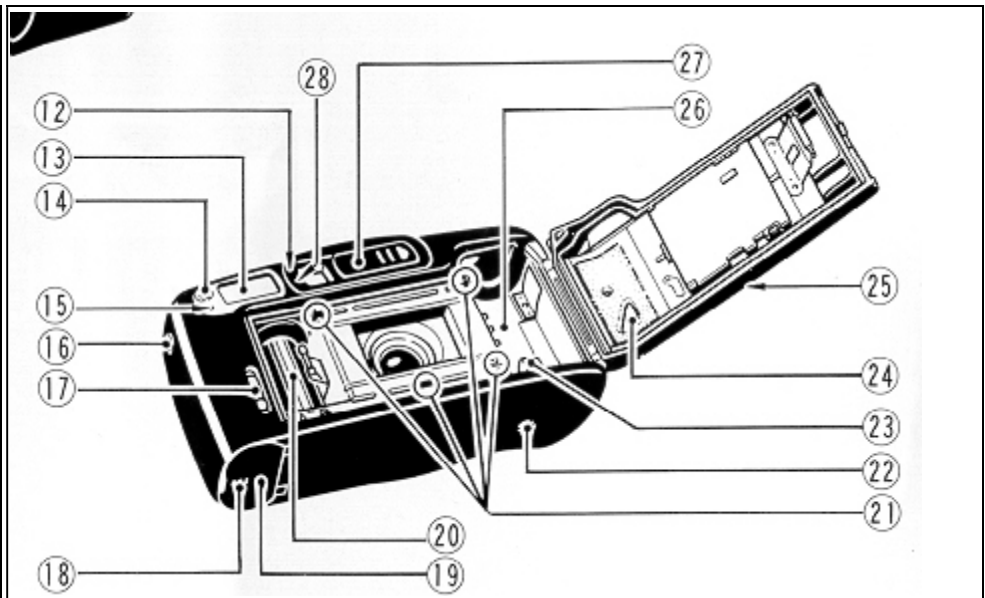

18. Battery Compartment Cover Latch
19. Battery Compartment Cover
20. Film Take-up Spool

23. Film Rewind Gear
24. Film Loaded Window
25. Back Cover

21. Film Guides	26. Film Cassette Chamber
22. Tripod Socket	27. Viewfinder Cover
	28. Flash Ready Lamp
	29. Viewfinder

ATTACHING THE STRAP

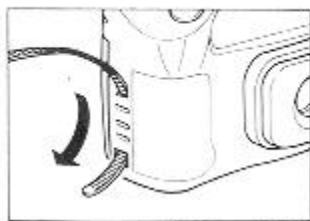


Fig. 1 Abb. 1

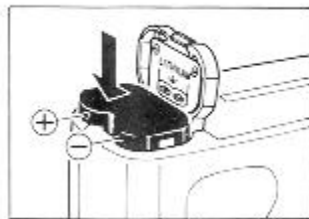


Fig. 4 Abb. 4

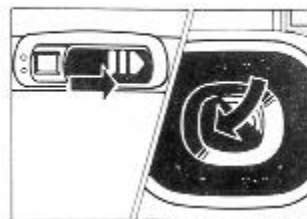


Fig. 7 Abb. 7

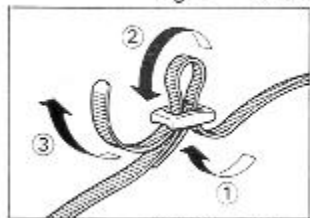


Fig. 2 Abb. 2

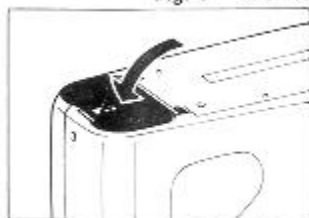


Fig. 5 Abb. 5

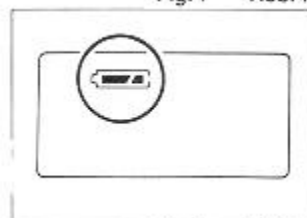


Fig. 8 Abb. 8

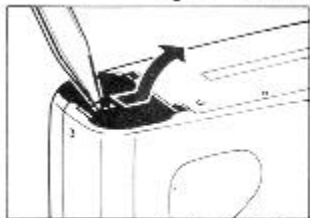


Fig. 3 Abb. 3

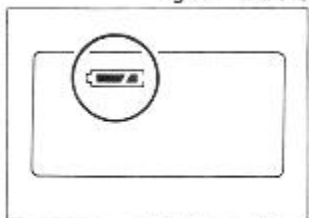


Fig. 6 Abb. 6

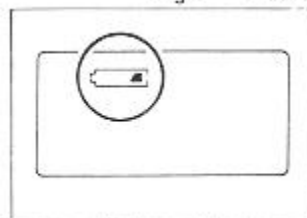


Fig. 9 Abb. 9


1. Run the end of the Strap down through the Strap Holder. (Fig. 1)
2. Then feed the end through the Buckle. (Fig. 2)

INSERTING THE BATTERY

The camera will not operate unless the battery is installed. It is important to make sure that the battery is installed correctly.

1. Use a pen to push the Battery Compartment Cover Latch in the direction of the arrow and pull open the cover. (Fig.3)
2. Insert the recommended. 6 volt lithium battery, contact end first, checking that the + and - on the battery are aligned according to polarity diagram inside the battery compartment. (Fig 4)

3. Close the Battery Compartment Cover by pushing it in the direction of the arrow until it locks firmly in place. (Fig. 5)

* With the battery inserted correctly, the Battery Condition Mark  appears on the LCD Panel when the Lens Shield is opened. (Fig. 6)

* Do not remove the battery from the camera until you are ready to replace it.

* When replacing the battery, do so as quickly as possible to avoid erasing camera memory. We recommend replacing the battery when there is no film in the camera.

Recommended. Replacement 6V Lithium Batteries

Include:

Lithium battery (6V)

Panasonic CR-P2p

Duracell XL DL223A (Made in U.S.A.)

Kodak K223LA, or equivalent

OPENING THE VIEWFINDER COVER

1. Open the Lens Shield by sliding the Viewfinder Cover in the direction of arrow. (Fig. 7)

* You can only take pictures when the Lens Shield is completely open.

* To avoid tripping the shutter inadvertently and wasting battery power, always keep Viewfinder Cover closed when you are not taking pictures.

* When the Viewfinder Cover is closed, all LCD indicators will disappear to conserve battery power.

CHECKING THE BATTERY

1. The  symbol is displayed on the LCD Panel when battery power is sufficient. (Fig. 8)

2. When the battery is nearly exhausted, the  symbol will appear. (Fig. 9) Release with a new battery as soon as possible. (Use of flash at this time is not recommended.)

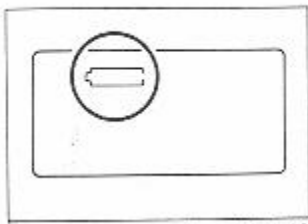


Fig. 10 Abb. 10

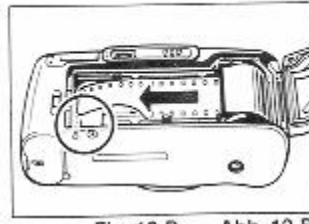


Fig. 12-B Abb. 12-B

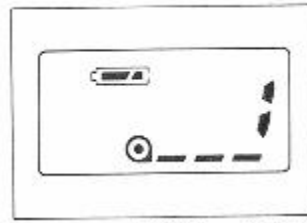


Fig. 15 Abb. 15

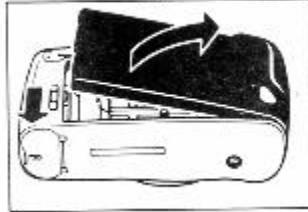


Fig. 11 Abb. 11

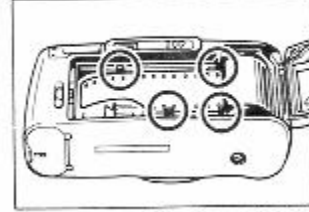


Fig. 13 Abb. 13

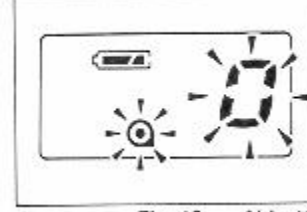


Fig. 16 Abb. 16

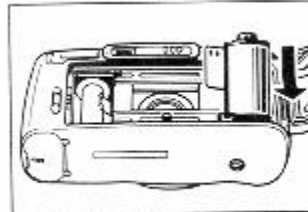


Fig. 12-A Abb. 12-A









Fig. 14 Abb. 14



Fig. 17 Abb. 17

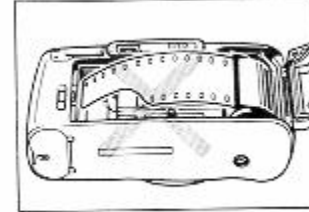
3. When the battery is completely exhausted, the  symbol will be displayed. (Fig. 10) Replace with a new battery.

* Even an exhausted battery has the ability to hold memory. Do not remove battery until a new one is available. Memory will be held for only about 15 minutes after battery is removed.

* Cold temperatures will reduce battery efficiency. In freezing weather, the  symbol may turn off and only the  or  symbol may show in the LCD Panel. When the camera returns to normal temperature, the Battery "All Right"  symbol should reappear. If you are taking pictures in cold weather, keep the camera warm and take it out only when you need it.

* If the battery voltage is insufficient, the shutter may not release or the film may not advance completely.

In the following cases, replace the battery:

- 1) When the battery mark displays the  symbol.
- 2) When the shutter does not release.
- 3) When film advance and rewind cannot be done.
- 4) When the self-timer does not function.

LOADING THE FILM

Always avoid direct sunlight when loading the film.

1. Push the Back Cover Latch Downward to open. (Fig. 11)

2. Load the film cassette into the Film Chamber and pull out enough film leader to extend past the mark of the film leader position. (Figs. 12-A, 12-B)

* If there is any dust on the inside lens surface, use a blower to blow the dust away.

3. Make sure the film stays within the Film Guides and lies flat. (Figs. 13,14)

4. Press the Back Cover shut so that the Back Cover Latch returns to its original position. The film is automatically advanced until number "1" appears in the LCD Panel. As soon as you close the Back Cover, the LCD Panel should confirm proper loading with the following: (Fig. 15)

(1) Film Cassette Loaded Symbol

(2) Film Advance Symbols (these symbols will flash in sequence toward the right to tell you the film is winding.)

(3) Exposure Counter

5. If the film has not advanced correctly and is not taken up onto the Film Take-up Spool, the Film Cassette Loaded Symbol and Exposure Counter will blink (Fig. 16), or the LCD Panel will not show all film properly loaded signs mentioned in the step 4 (when Viewfinder Cover is closed). The shutter release will also lock so you cannot take a picture until the film is loaded properly.

Reload the film by following steps 1-4 shown above.

* Whether there is film in your camera or not can be confirmed by either the Film Loaded Window or the Film Cassette Loaded Symbol in the LCD Panel. (Fig.17)

* You can confirm that the film-wind or rewind is working properly by observing the Film Advance symbols.

* You can load film in your camera with the Lens Shield closed. However, the loading sign will disappear after 5 sec.

* Do not touch the inner lens with your fingers or the edge of film. (Fig. 18)

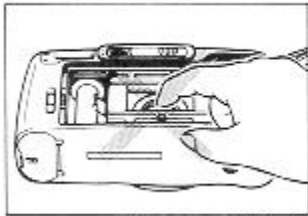


Fig. 18 Abb. 18



Fig. 21 Abb. 21

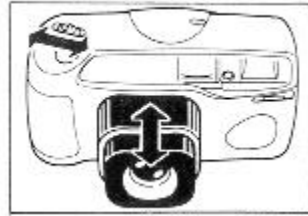


Fig. 24 Abb. 24

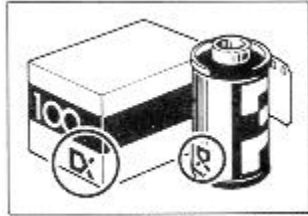


Fig. 19 Abb. 19



Fig. 22 Abb. 22

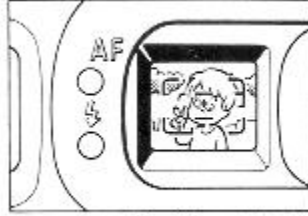


Fig. 25 Abb. 25



Fig. 20 Abb. 20

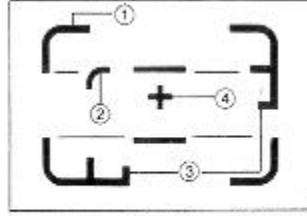


Fig. 23 Abb. 23

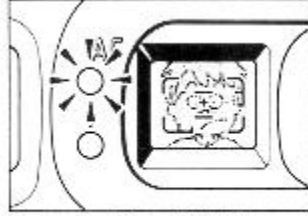


Fig. 26 Abb. 26

SETTING THE FILM SPEED

DX-coded film cassettes have black-and-silver patterns corresponding to film speeds that the camera reads and automatically sets. Your camera accepts DX films with speeds ranging from ISO 64 to 3200. Before loading your film, please check whether the cassette is DX-encoded or not. (Fig. 19)

When using DX coded films, setting the film speed is not necessary. Your camera automatically sets the correct film speed.

When using a film without DX code, your camera will automatically set itself to ISO 100.

HOLDING YOUR CAMERA

1. Always use both hands to steady your camera. (Fig. 20)

* When holding the camera vertically always position it with the flash at the top. (Fig. 21)

* Be careful not to place your fingers over the lens, flash or focusing windows. (Fig.22)

* We suggest that you become familiar with your new camera by shooting and processing at least one roll of film before using your camera to record an important occasion.

VIEWFINDER (Fig. 23)

(1) Field of View Frame:

The subject (such as people or scenery) you wish to photograph should be set within this frame.

(2) Parallax Correction Marks: (Close focusing)

When taking a picture of a subject that is between 0.5m--1.2m away from your camera, the subject should be positioned within these marks. Anything outside the marks will not be included in the picture even if you can see d through the viewfinder

(3) Parallax Correction Marks (Super Macro Mode)

When using this special mode (see page 28), adjust the camera so that the subject is within the smaller parallax correction marks.

(4) Single AF Mark

In the Single AF mode (see page 27) the auto-focus system focuses automatically on any subject that appears within this small "+" target

ZOOMING THE LENS

The built-in 38--90mm zoom lens lets you get closer to your subject without changing your position. This lets you easily select the composition that best suits your subject.

To zoom the lens, just slide the zoom switch (Fig 24) in either direction until your subject is framed properly.

- * When zooming the lens, keep your fingers away from the moving lens components.
- * When closing the Viewfinder Cover, the lens will return to its storage position automatically.
- * After 3 minutes, the lens will return to wide position and the display on the LCD panel will disappear.

MULTI AUTO-FOCUS

1. Set the subject you wish to take within the Viewfinder Frame. (Fig. 25)
 2. If the subject is closer than 0.5m the AF-Monitor will blink and the shutter will lock to prevent out of focus pictures. (Fig. 26)
- * Under certain unusual conditions, the AF Monitor may not warn when you are too close to the subject.
3. Press the Shutter Release Button gently to avoid camera shake
 4. This camera measures distance from subject to camera at 5 spots (wide-angle). Among those spots, focusing will be adjusted to the closest subject. This function will help avoid out-of-focus-pictures. (Examples 1, 2)



Example 1 Exemple 1
Ejemplo 1 Beispiel 1



Example 3 Exemple 3
Ejemplo 3 Beispiel 3



Example 2 Exemple 2
Ejemplo 2 Beispiel 2










Example 4 Exemple 4
Ejemplo 4 Beispiel 4

* Be careful not to accidentally cover the Auto Focus Distance Measuring Windows on the front of your camera, as this will cause incorrect focusing.

* Keep the Auto Focus Distance Measuring Windows clean to ensure accurate focusing. If they get dirty, they should be wiped clean with a soft cloth.

* There may be rare cases when accurate focusing is difficult or impossible. (For instance, with dark subjects that do not reflect light well, glossy subjects, or subjects taken through glass.) In these cases, it is best to switch to the single AF mode and use the Pre-Focus technique (see section SINGLE AF MODE) to "lock" the focus on a more "normal" subject at the same distance. While holding focus, turn your camera back to the original subject and shoot. (See SINGLE AF MODE (page 27) for more details.)

REWINDING THE FILM (AUTO REVERSE)

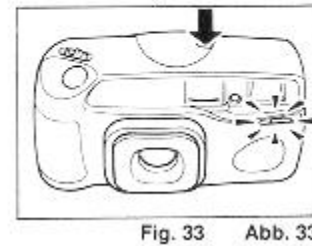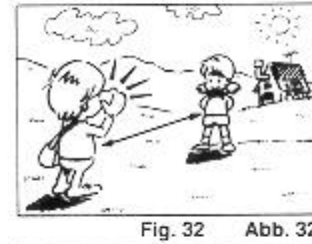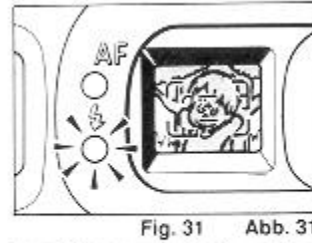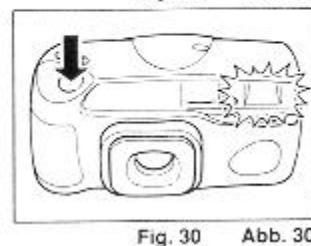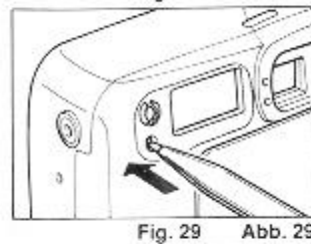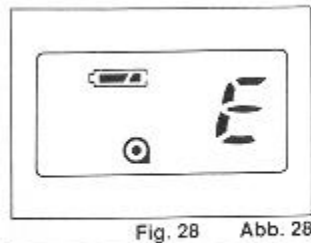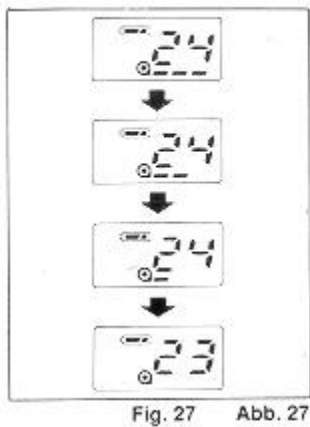

8

1. After the end of the film has been reached the film will automatically rewind
2. Film rewinding is indicated by three dashes flashing in sequence from right to left and the counter counting backwards. (Fig. 27)
3. When the film is fully rewound, the motor stops automatically and "E" is displayed in the LCD Panel. (Fig. 28) Open the Back Cover to unload the film.

* If you wish to rewind the film before reaching the end of the film, push the Manual Film Rewind Button with a pen, etc. (Fig. 29) In this mode, the rewound film will still leave part of the film leader extended out of the film cassette. (You may push the film completely back into the cassette to avoid accidentally reloading it again at a later time.)

- * The shutter release is locked with "E" is displayed.
- * Be careful not to touch the inner lens surface with your fingers or the edge of film.

FLASH PHOTOGRAPHY

1. If additional light is required, the built-in Flash automatically activates. **(Fig. 30)**

* If the camera has shut off, turn the power back on by lightly pressing the Shutter Release Button. It will take about 3 seconds to charge the flash fully.

* Recommended Flash Shooting Range (ISO 100) Wide-angle: 0.5m--about 5.2m Telephoto: 0.5m--about 3.3m

2. When the flash is still charging, the Red Flash Monitor will blink. **(Fig. 31)** Wait until RED-LED turns off in order to use the flash.

* When the flash is used, there may be cases in which your subject's eyes appear red in the finished photograph. This occurs when the retina reflects the flash light, although the intensity of the phenomenon differs for each individual as well as subject distance and how light or dark the picture-taking environment is.

To avoid the red eye, select the Red Eye Reduction flash mode discussed on page 25.

AUTO BACKLIGHT CONTROL/AUTO FILL FLASH

When taking pictures of backlit subjects, important details are often lost in the shadows. Your camera automatically compensates for these lighting situations. If the subject is backlit and is at least about 3 meters from the camera Auto Back-Light Control (ABLC) will be activated. If the subject is within about 3 meters of the camera, the flash activates automatically and the shadows are lightened up using automatic daylight fill-flash. Thus, with backlit subjects, natural-looking pictures can be taken easily and automatically. **(Fig 32)**

AUTO NIGHT-PHOTOGRAPHY

When photographing distant night scenes, the flash will not be activated. Instead, the exposure will be set to a slow shutter speed for more natural-looking results. Please your camera on a steady support to avoid unsharp pictures due to camera shake.

USING THE SELF-TIMER

1. Compose your picture with the camera on a steady support.

2. Press Self-timer Button. The Self-timer LED on the front of the camera will light steadily for approximately 8 seconds. Then the LED will blink for about 2 seconds to indicate that the shutter is about to release. After a total of about 10 seconds have elapsed, the shutter will release. (Figs. 33, 34)

* If you wish to stop the self-timer once it has started, close Viewfinder Cover or press the Self-timer Button again.

3. When you use the self-timer in bright scene, LED is not clearly visible and dummy flash is fired just before shutter release.

Using the Self-timer for Flash Photography:

- a. When the Self-timer Button is pressed the built in Flash will fire automatically whenever there is insufficient light.
- b. The flash will charge during the 10 sec. countdown.

* You may not be able to activate the self-timer when the flash is just beginning to recharge. Wait 2-3 seconds and try again.








* If the distance between subject and camera is too close, the AF Monitor will blink. At that time, the self-timer will not activate. Move back a little and try again.

* Too-Close Warning Lamp (AF Monitor) will blink only when pushing Self-timer button and/or the Shutter Release Button.

Using the Self-timer for Pre-focus Photography:

- a. Select Single AF Mode (See CREATIVE MODES Section, page 24).
- b. Select the subject you wish to pre-focus on. Move the camera so that it is in Spot Auto-Focus Target.
- c. Press the Shutter Release Button halfway down to adjust and lock-in the focus and reposition the camera if necessary.
- d. While holding the Shutter Release Button halfway, press the Self-timer Button to activate the self-timer.
- e. The focus will remain fixed at the locked-in distance until the photograph is taken.

CREATIVE MODES

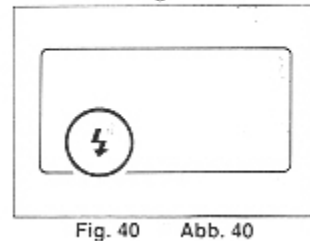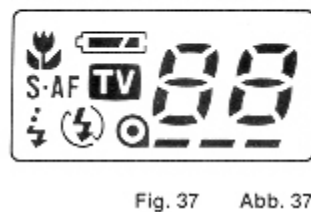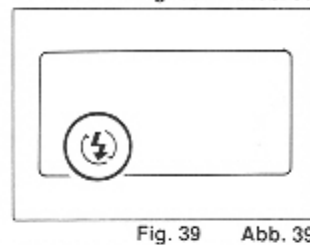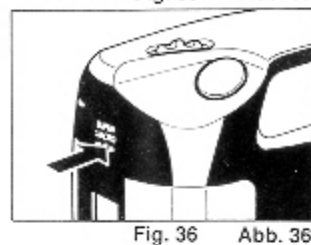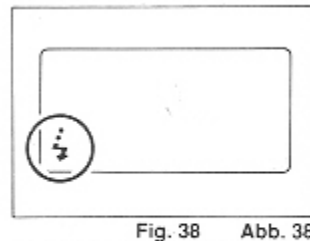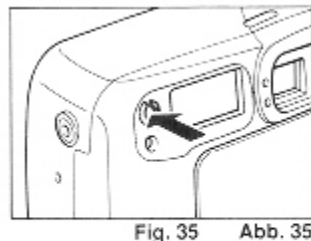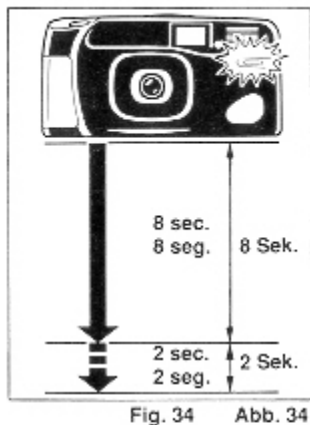

This camera includes a variety of special operating modes which permit you to widely express your creativity. These modes include Flash-off Flash-on, Red Eye Reduction/Soft-flash, TV, Single-AF and Super-Macro. Many combinations may be made using these selections with flash photography, self-timer, and/or remote control picture taking, allowing you to fully and precisely obtain the image you seek. Try experimenting. These modes are designed to stimulate your imagination and creativity.

* To select operating modes, simply press the Mode Button the LCD Panel located on the back of the camera. (Fig. 35) (The Super Macro Button is found on the side of the camera.) (Fig. 36)

You can confirm that the desired feature mode is in effect by checking the LCD Panel which displays the current feature mode. The symbols used for these modes are listed below For detailed operation of each mode, refer to their respective sections in this manual.

RED EYE REDUCTION AND SOFT-FLASH MODE

Minimizing the Red-Eye Effect

Selecting this mode makes it possible to minimize the red-eye effect that sometimes occurs when taking portrait photographs with flash. Now it's easy for anyone to take superior shots of people.

1. Press the Mode Button until the g symbol appears on the LCD Panel. (Fig. 38)
2. Press the Shutter Release Button. The flash system will begin its pre-flash cycle. After a brief delay the main flash will fire. The entire sequence will take about one second.

* Be sure to hold the camera still after pressing the Shutter Release Button.

* You may wish to advise your subjects to wait for the second flash.

* This mode does not cancel when the camera is switched off. To cancel this mode, press the mode button again for any other selection.

Reducing Flash Output



Example 1 Exemple 1
Ejemplo 1 Beispiel 1



Example 3 Exemple 3
Ejemplo 3 Beispiel 3



Example 2 Exemple 2
Ejemplo 2 Beispiel 2



Example 4 Exemple 4
Ejemplo 4 Beispiel 4

This allows you to adjust the flash brightness to prevent excessively overexposed pictures when photographing, for example, female subjects with light skin at close range. (**Examples 3, 4**)

1. Press the Mode Button until the g symbol appears on the LCD Panel.
 2. Press the Release Button. The flash system will begin with the pre-flash sequence. After a brief delay, the shutter will trip and the main flash will fire at a reduced brightness level. The Pre-flash sequence lasts approximately one second.
- * Be sure to hold the camera still after pressing the Release Button until full the cycle is complete and the shutter has tripped.
 - * To cancel this mode' press the Mode Button to select a different mode symbol (or none) on **the LCD Panel**.

FLASH-OFF MODE

This mode forcibly prevents automatic firing of the flash, thus allowing available light photography in museums, churches, etc. where flash photography is prohibited.

1. Press the Mode Button until the by) symbol appears on the LCD Panel. (Fig. 39)
 2. Press the Release Button and the shutter will be tripped without flash (maximum of approximately 1/2 second).
- * TO cancel this mode, press the Mode Button until there is a different mode symbol (or none) on the LCD Panel, or close the viewfinder cover.

FLASH-ON MODE

This forcibly trips the flash when you want to photograph subjects with sunlight to their side or back It lets you take more natural looking pictures by softening harsh shadows.

1. Press the Mode Button until the ~ symbol appears on the LCD Panel. (Fig. 40)
 2. Press the Release Burton. There will now be flash every time the shutter is tripped.
- * The camera will follow a daytime SYNCHRO-Sunlight Exposure program in cases of bright light.
 - * The camera will go to slow synchro photography in cases of dim light
 - * To cancel this mode, press the Mode Button until there is a different mode symbol (or none) on the LCD Panel, or close the viewfinder cover.

TV MODE

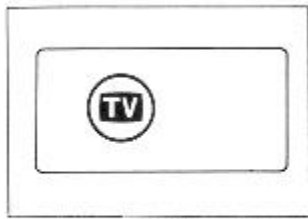


Fig. 41 Abb. 41

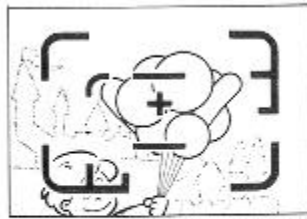


Fig. 44 Abb. 44

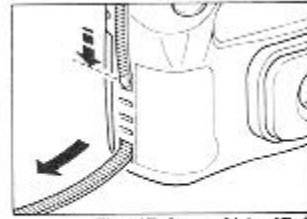


Fig. 47-A Abb. 47-A

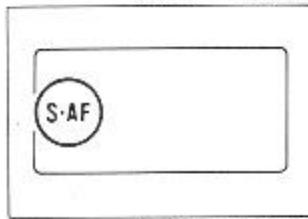


Fig. 42 Abb. 42



Fig. 45 Abb. 45

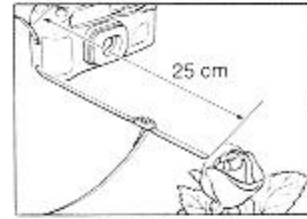


Fig. 47-B Abb. 47-B

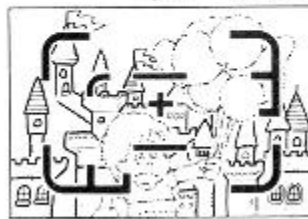


Fig. 43 Abb. 43

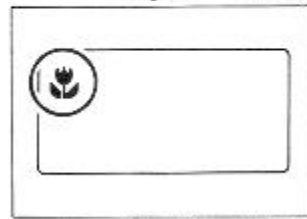


Fig. 46 Abb. 46



Fig. 48 Abb. 48

8

Use this mode to record your computer graphics or video images from the screen of a computer monitor or television.

1. Press the Mode Button until the **TV** mark is displayed on the LCD Panel. (Fig. 41) Take the picture.

* The Flash Unit will not activate in the TV Mode.

* When taking pictures in the TV Mode, the shutter speed will be set between 1/30 sec (wide) and 1/16 sec. (tele) and ISO will be reset to 100.

* For TV Mode photography, slow-moving TV images will usually turn out clearer than fast-moving ones.

Using a tripod and electronic cable release is recommended to prevent camera shake.

* To use the self-timer in this mode, press the Mode Button until the camera is set to TV Mode, then press the Self-timer Button.

* To cancel this mode, press the Mode Button until the LCD Panel shows a different mode symbol (or none), or close Viewfinder Cover.

SINGLE AF MODE (PRE-FOCUS SHOOTING)

Your camera's multi-beam autofocus system will provide excellent results in most shooting conditions.

However, when the subject you wish to focus on is behind a window, fence or bars, located high or low in the viewfinder, you should use prefocus shooting. This will ensure a sharply focused image of your subject.

When the subject is high or low within the viewfinder:

1. Press the Mode Button until the **S-AF** symbol appears on the LCD Panel. (Fig. 42)

2. There may be cases where none of your main subjects are within the multi-beam autofocus area located across the middle of the Viewfinder (eg. subject located high or low). If you release the shutter then, only the background will be in focus and the subject will be out-of-focus. (Fig. 43)

3. To prefocus, move the camera so that one of the subjects is within the Auto-Focus Target (+). (Fig. 44)

Press the Shutter Release Button halfway so that the AF Monitor lights up. Keep holding your finger halfway down on the Shutter Release Button.

4. Now return the camera to its original position so that your main subjects are composed to your liking within the Field of View Frame again, and press the Shutter Release Button fully to take the picture. (Fig. 45)

When the subject is difficult to focus on:

When you are photographing subjects that are difficult to focus on (such as a black dog, glossy surface or behind glass), or if your main subject is behind other closer objects, then find another subject at the same distance from the camera. You can pre-focus on that subject in the following way:

1. Press the Mode Button until the S IF symbol appears on the LCD Panel.

2. Move the camera so that one of the subjects or "substitute subjects" is within the Auto-Focus Target (+)

3. Press the Shutter Release Button halfway so that the AF Monitor lights up. Keep holding your finger halfway down on the Shutter Release Button

4. Now return the camera to its original position so that your main subjects are in the Field of View Frame again, and press the Shutter Release Button fully to take the picture.

* If you are shooting through a window, aim the camera at a slight angle to the glass to minimize any direct reflection of the auto-focus beam.

* When you remove your finger from the Shutter Release Button, the pre-focus setting is cleared, so that you can pre-focus again as many times as you wish.

SUPER MACRO

This mode allows you to photograph at 25 cm of a subject. It's perfect for tightly framed close-up shots of plants and other small objects.

1. Press the Mode Button until the (flower) symbol appears on the LCD Panel. (Fig. 46)

2. Stretch the strap forwards the subject and move the camera until the end of the strap reaches the subject. (Figs. 47-A, 47-B)

3. Adjust the camera so that the subject is in the center of the Super-macro frame of the viewfinder. (Fig. 48)

4. Press the Release Button to trip the shutter. The flash will always fire (at low power) in this mode.

* To release this mode, either press the Super Macro Button again, operate the Zoom Button or close the Viewfinder Cover

ELECTRONIC REMOTE CONTROL SOCKET

This camera is equipped with an Electronic Remote Control Socket. You can trip the shutter remotely in various ways by plugging an (optional) infrared sensor, audio sensor, remote controller, etc., into this socket. A 50cm Electronic Cable Release cord, and a 10m extension cord, are also available from Ricoh as options for use in remote control photography.

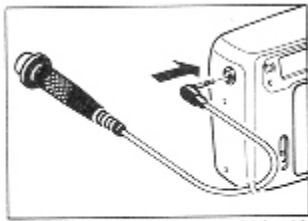


Fig. 49 Abb. 49

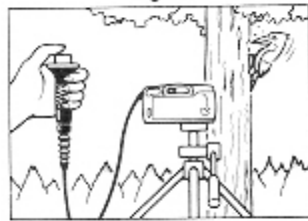


Fig. 50 Abb. 50



Fig. 51 Abb. 51

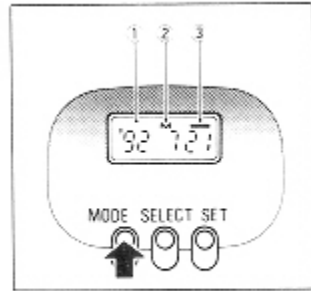


Fig. 52 Abb. 52

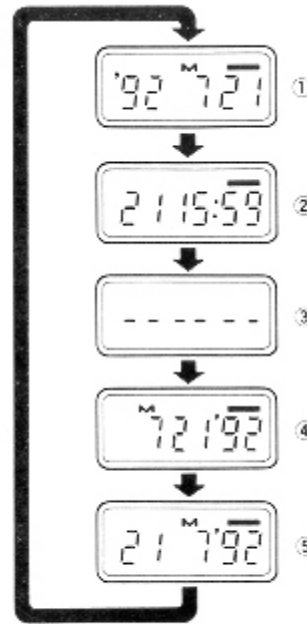


Fig. 53 Abb. 53

9

Typical Installation

1. Insert the plug of the Electronic Cable Release or Remote Controller to the Electronic Remote Control Socket. (Fig. 49) An extension cord can be used for taking photographs at a distance from subjects.

2. Using a secure support, aim the camera at the subject and gently press the remote controller button. (Fig. 50)

* Before inserting or pulling out a cord into/from this socket, close the Lens Shield. If the Lens Shield is left open, the shutter might accidentally be released.

Optional Wireless Remote Controller RC-10

The separately sold Wireless Remote Controller RC-10 allows you to easily use remote control photography. (Fig. 51)

<p>(OPTIONAL) DATABACK SETTINGS</p> <p>Nomenclature of the date imprinting feature (Fig. 52)</p> <p>(1) Display panel</p> <p>(2) Month indication</p>	<p>(3) Imprint mark</p> <p>(4) Set button</p> <p>(5) Selector button</p> <p>(6) Mode selector button</p>
--	--

Imprinting mode

Examples of date imprinting (Fig. 53)

- (1) 1992 July 21st
- (2) 21st 15:59
- (3) No imprinting
- (4) July 21 st, 1992
- (5) 21st July, 1992

The date imprinting mode can be divided into 5 types: date, time, and no imprinting.

Selecting imprinting mode (Fig. 53)

Each time the Mode selector button is pressed, the display changes as shown below.

- (1) Date (Year/month/day)
- (2) Time (Day/hour/minute)
- (3) no imprinting
- (4) Date (Month/day /year)
- (5) Date(Day/month/year)

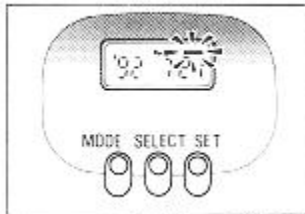


Fig. 54 Abb. 54

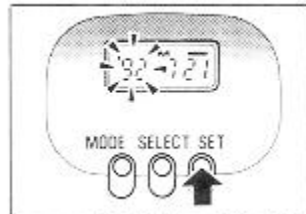


Fig. 55-C Abb. 55-C

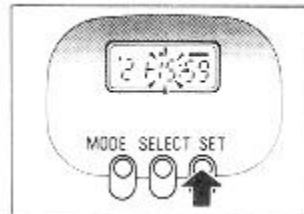


Fig. 56-C Abb. 56-C

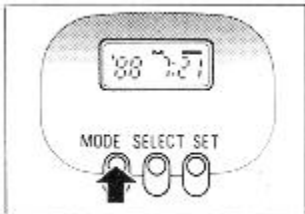


Fig. 55-A Abb. 55-A

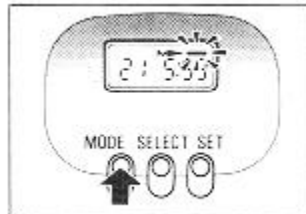


Fig. 56-A Abb. 56-A



Fig. 57 Abb. 57

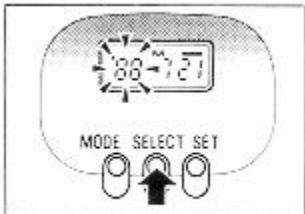


Fig. 55-B Abb. 55-B

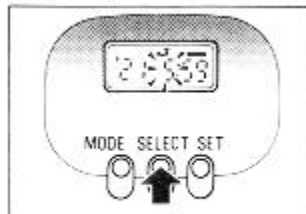


Fig. 56-B Abb. 56-B



Fig. 58 Abb. 58

10

Checking imprinting (Fig. 54)

After shooting, the imprint mark -- flickers in the display panel for a few seconds for correct imprinting. The mark and the letter "M" are not imprinted on the picture.

Resetting the date and time (Figs. 55-A - C)

1. Each time the Selector button is pressed, the flashing digits change in the order of year, month, day, hour, minute end colon (:).
2. When the digits to be reset flash, press the Set button until the desired digits appear. When the Set button is kept pressed, the digits change rapidly.

Accurately seeing seconds (Figs. 56-A- C)

1. Press the Mode selector button for Time display mode.
 2. Press the Selector button so that the colon (:) flickers.
 3. Press the Set button according to the radio or telephone time signal. The time count starts from 0 seconds.
- * It is recommended that the second digits be adjusted after adjusting the minute digits.

Battery Replacement

The date/time function draws power from the camera battery. For detailed information on the battery, refer to "Inserting the Battery". When replacing the battery, If the display does not blank out, setting the date and time after battery replacement is not necessary. But if there is nothing on the display, set the date and time after installing new battery. Note that even when the battery is removed, the display will still be effective for a while.

Notes on date imprinting feature

* At temperatures below 0°C (32°F), the battery performance deteriorates. The date imprinting feature may not function correctly and imprinting may become impossible

* When the battery is replaced, the display panel sometimes shows wrong digits. Reset the digits for correct indication.

* The date is sometimes illegible if it is imprinted on the following objects.

- (1) "Warm"-colored objects, such as red, yellow, orange, etc.
- (2) Objects with details similar in size to the imprinted date (gravel, leaves, etc.)
- (3) Objects of high luminance (sky, white wall, etc.)

* Imprinting is not possible in the following modes. (1) Print off mode (2) Reset mode

PROPER CARE OF YOUR CAMERA

* If there is dirt on the lens or Distance Measuring Windows and in the camera body, do not attempt to remove it with your fingers. Use a blower to blow the dust away, or wipe the surface gently with a soft cloth. (Fig. 57)

* Camera malfunction can be caused by shock, humidity, salt etc. After using the camera at the beach or places where there is salt spray high humidity or chemicals, wipe it off carefully. (Fig. 58)

* Take care not to expose the camera to sudden changes in temperature, as they may cause condensation on the lens and inside the body, or other malfunctions. (Fig. 59)



Fig. 59 Abb. 59



Fig. 62 Abb. 62



Fig. 60 Abb. 60



Fig. 61 Abb. 61

- * Do not expose the camera for a long period of time in extremely high temperatures, such as in your car or on the beach, as this may ruin your film, or cause other malfunctions. (Fig. 60)
- * When using a tripod, do not try to force a long screw into the socket. The screw length should be less than 5.7 mm. (Fig. 61)
- * Do not place the camera near equipment that has strong magnetic fields such as a television or radio. (Fig. 62)

MAJOR SPECIFICATIONS:

Type: Full-automatic 35 mm auto focus lens-shutter camera with built-in ZOOM lens.

Lens: 38 mm f4.5--90 mm f7.2 zoom lens 7 elements 7 groups

Focus: Multi-Beam Automatic focusing with single AF facility. Distance measuring (shooting) range: 0.5 m--∞. subjects between 0.5 m and 0.25 m, the AF monitor (Green LED) blinks and shutter release locks. Super Macro Mode focuses at 0.25 m.

Self-timer: Built-in electronic type with LED indicator. Operating delay of approx. 10 sec.

Viewfinder: Albada type bright-frame zoom viewfinder

Magnification: 0.64x (at telephoto) 0.35x (at wide-angle)

Field of view: 90% (at telephoto), 77% (at wide-angle)

Viewfinder information: Field of view frame, parallax correction marks, single AF mark, super macro parallax correction marks.

Exposure adjustment: Dual SPD photocell. Programmed automatic exposure adjustment with Automatic Backlight Control system.

Exposure coupling range: EV5.3--17 (ISO 100)

Shutter speed range: 1--1/400Sec.

Film speed range: ISO 64--3200. Compatible with the DX code system. (Non-DX films are set to ISO 100.)

Film loading: Ricoh auto-load system

Film advance/rewind: Automatic film advance and rewind. Automatic 1st frame setting. Automatic film rewind at the end of film.

Exposure counter: Additive, counts down during film rewind.

Built-in flash: Electronic flash automatically activates in dim light and backlight. (up to approximately 10ft.)

Flash shooting range: About 0.5--5.2 m (at wide-angle), about 0.5--3.3 m (at telephoto). (ISO 100)

Interval between flashes: About 3 sec.

Other features: Red eye reduction/Soft flash, Flash-on, Flash-off, TV mode, Single ~SPOT' AF mode.

Power Source: 6V lithium battery x 1

Dimensions: 142 mm (w) x 73.5 mm (h) x 57 mm (d)

Weight: 355 g (without battery)

* Specifications are subject to change without notice.