

Ciro-Flex

Posted 7-12-'03

HTML Translations - [German](#) - [Italian](#) - [French](#) - [Spanish](#) - [Others](#)

These links will not translate any PDF files

This camera manual library is for reference and historical purposes, all rights reserved.

This page is copyright © by mike@butkus.org, M. Butkus, NJ.
This page may not be sold or distributed without the expressed permission of the producer
I have no connection with Chinon Co., Japan

On-line camera manual library

This is the full text and images from the manual. This may take 3 full minutes for all images to appear.

If they do not all appear. Try clicking the browser "refresh" or "reload button" or right click on the image, choose "view image" then go back. It should now appear.

To print, try printing only 3 or 4 pages at a time.


[Back to main on-line manual page](#)

If you find this manual useful, how about a donation of \$3 to: M. Butkus, 29 Lake Ave., High Bridge, NJ 08829-1701 and send your e-mail address so I can thank you.

Most other places would charge you \$7.50 for a electronic copy or \$18.00 for a hard to read Xerox copy.

This will allow me to continue to buy new manuals and pay their shipping costs. It'll make you feel better, won't it?

If you use Pay Pal, use the link below. Use the above address for a check, M.O. or cash.

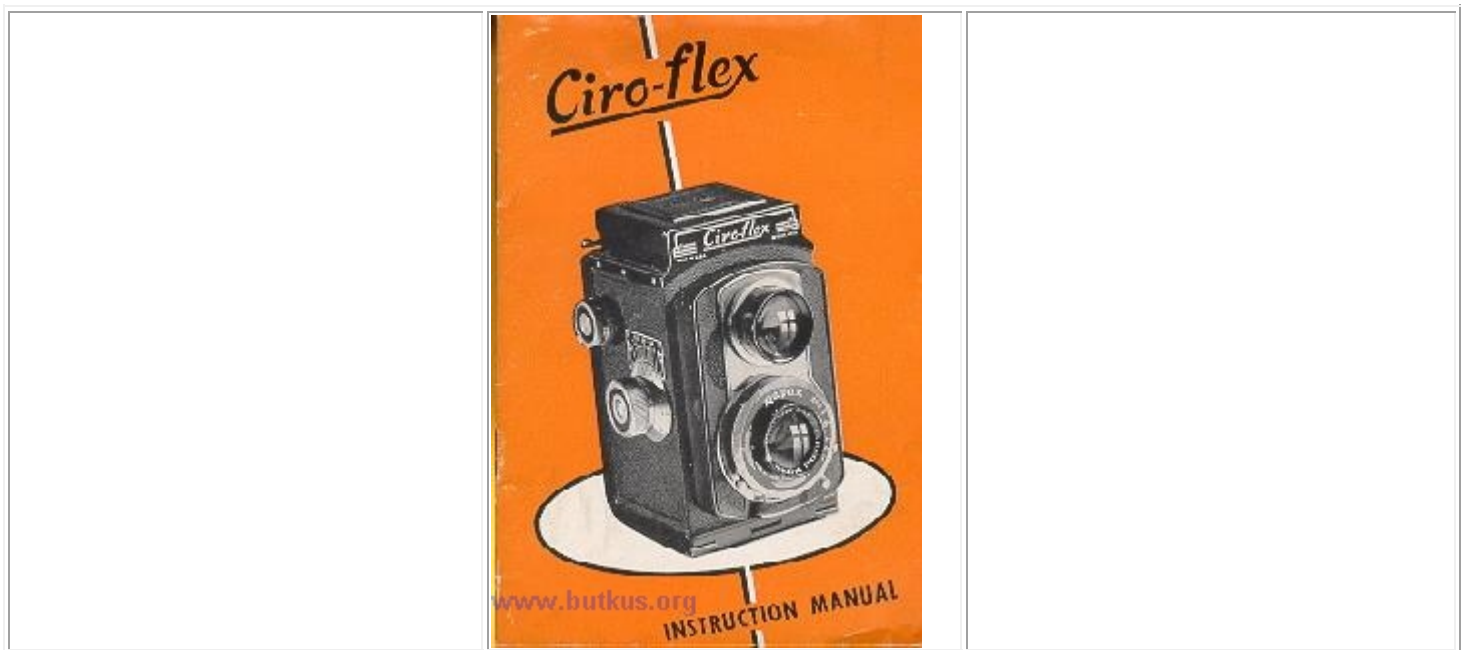

Copyright 1946
by
CIROCAMERAS, INC.
425 S. Sandusky
Delaware, Ohio

GETTING ACQUAINTED...



WELCOME to the ranks of satisfied *Ciro-flex* owners! You, like others who have turned to *Ciro-flex*, will find it a precision-built reflex camera capable of giving you consistently better, clearer, sharper pictures. Every part, every assembly used in its manufacture is the result of painstaking labor by highly skilled craftsmen whose job it is to give you the best camera possible for your photographic dollar. So look upon your *Ciro-flex* as a fine instrument; care for it as such and it will repay you with a lifetime of more than satisfactory service...

1. VIEWING HOOD:--Snaps open by pressing release lever on left side. Ground glass panel beneath hood reflects actual print-size image of picture the camera sees. Magnifier inside hood provided for sharp, critical focusing. Small opening in back panel serves as Sportsfinder for fast action shots.


2. DEPTH-OF-FOCUS CHART:--Accurately calibrated with marked focusing knob to establish a "zone of sharpness" at a given distance for a predetermined exposure setting. See page 11 for detailed explanation of use.

3. WINDING KNOB:--Rolls film forward to bring next exposure number under red window on back of camera.

4. FOCUSING KNOB:--Turns to bring image into sharp relief on ground glass. Marked for distances from three feet to infinity.

WORKING PARTS OF *Ciro-flex*

The first step in using any new camera is to familiarize yourself with its working parts. These parts of your new *Ciro-flex* are indicated below, while explanations of their use are presented on the opposite page.

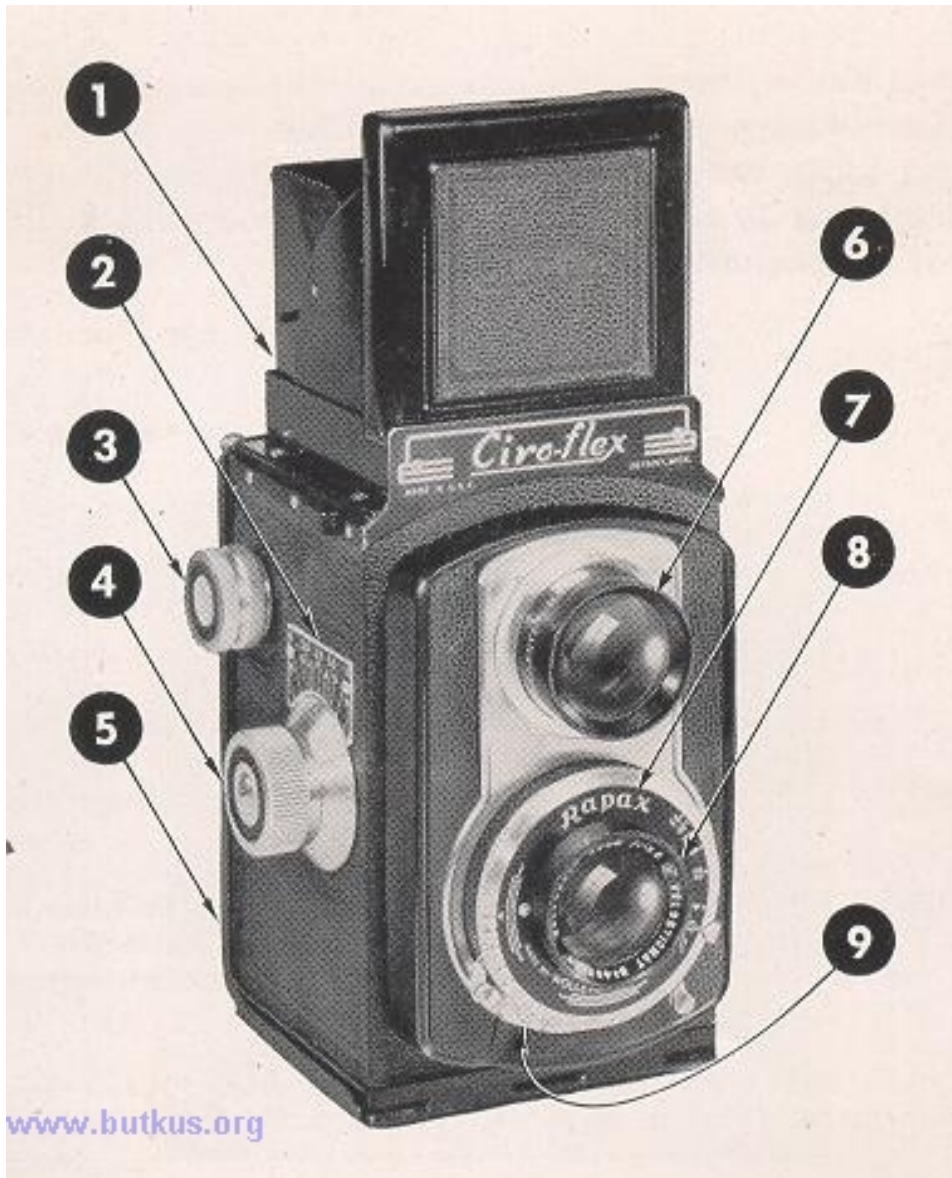

5. BACK COVER:--Opens for loading film by pressing down on built-in button at top.

6. VIEWING LENS:--Fine coated f3.2 Wollensak Anastigmat lens synchronized with Taking Lens below to permit sharp focusing and excellent composition arrangements on the ground glass before each exposure.

7. SHUTTERS:--Your *Ciro-flex* is equipped with either the Automatic *Alphax* Shutter or the Wollensak Set-and-Release Shutter. Both are famous for their accurate, dependable performance. *Alphax*: speeds range from 1/10th to 1/200th of a second. *Rapax*: speeds from 1 to 1/400th of a second. Both provide for bulb and time exposures.

8. TAKING LENS:--f3.5 Wollensak Velostigmat lens, coated and corrected for excellent color work. Perfectly synchronized with Viewing Lens above. Automatic corrective parallax device controls both lenses...

9. CABLE RELEASE FITTING:--Built in for either cable release or flash attachment extension. Threaded fittings on right side and bottom of camera provided for flash attachment and tripod.

FILMS THAT FIT *Ciro-flex*



Your *Ciro-flex* takes either Eastman 120 or Agfa B-2 for black-and-white prints while Eastman Kodacolor C-120 may be used for fine color work. Eastman 120 and Agfa B-2 are available in five different types or grades each of which, properly exposed, will record the full range of tone values.


Since some types of film are more sensitive to light than others, the specific "speed" of the film being used plus the intensity of light illuminating the subject should be considered in determining proper exposure setlines.

The use of a good exposure meter is an excellent short-cut through the complications of correct exposure and it provides you with a selection of lens apertures and shutter speeds that will result in satisfactory negatives.

For your information as well as for a basis of film comparison, the published film speed ratings of each of the films that fit your *Ciro-flex* are reprinted below:

LOADING YOUR *Ciro-flex*

Your *Ciro-flex* may be loaded with any of the films listed on page 4 in normal daylight without fear of "fogging" the film. Loading in direct sunlight, however, is to be avoided.

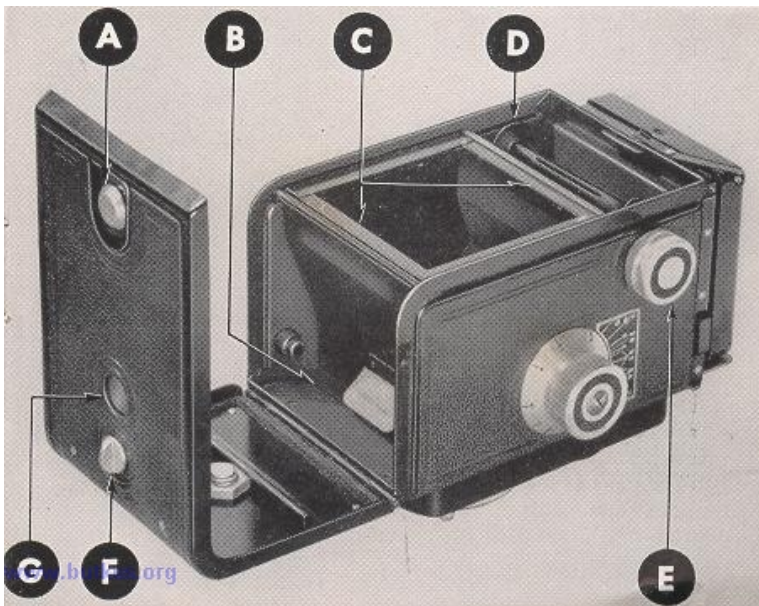

Open the camera by pressing down on **Button A** and lifting out on back cover panel.

Fit the film on spool holders in **Recess B** and draw film upward over **Focal Plane Opening C**, making sure that colored protecting paper on film is facing out.

Slip pointed end of film through slot in **Take-up Spool D** as shown above and turn **Winding Knob E** a few times to start film straight on Take-up Spool.

Return back cover panel to closed position and lock in place by pushing up on **Button A**.

With camera loaded and back cover panel locked securely, turn **Button F** to open built-in **Window G**. Then turn Winding Knob until the figure (1) appears under red window.



To give film maximum protection from light, window should be kept closed at all times except when transporting film to next exposure number...

FOCUSING YOUR *Ciro-flex*



Your *Ciro-flex* was designed to bring you two separate systems of focusing, both of which serve a definite purpose . . . the Ground Glass System for sharp, critical focusing and general purpose use, and the Depth of Focus Scale System for sports events and fast moving objects.

While both systems are fully explained on the following pages, let's first establish a basis of understanding with regard to certain terms used in any discussion of this subject.

TERMINOLOGY

Diaphragm or Lens Stop

The diaphragm or lens stop is an adjustable iris located in the shutter between the lens elements. It controls the amount of light passed through the fine "wocoated" Wollensak taking lens used by *Ciro-flex*. It also serves as the devise that controls the depth of focus in your *Ciro-flex*.

The picture you see Is the picture you take

Depth-of-Focus . . .



When the lens is focused on a point or object, those subjects somewhat nearer and farther away from the lens are relatively sharp also. This effect is called "depth-of-focus". As the diaphragm is made smaller . . . i.e., as the lens is stepped down, you will note that this field of relatively sharp focus is extended to subjects even nearer and farther away from the object upon which the lens is focused as illustrated above.

Correct Exposure Setting . . .

The correct exposure setting for a given picture depends upon the intensity of the light with which the subject is illuminated and the speed of the film being used. When these quantities are known, the shutter may be adjusted to the proper diaphragm opening and set for the right length of time to result in sharp, clear negatives of a density which will permit making good prints.

With knowledge of film speed values, the use of a good exposure meter is recommended as an excellent short-cut to correct exposure settings.

FOCUSING . . . *Ground Glass System*



The *Ciro-flex* Ground Glass System of focusing gives you a print-size preview of every picture you take before you expose the film. It is used in most general cases where time permits and is particularly recommended for taking portraits and other pictures where sharp, clear, crispness of detail is desired...

To focus on the ground glass, open the viewing hood by pressing down on release lever on left side of camera. Now, by holding the camera in your left hand up close to your chest, you can look down onto the ground glass and see an actual print-size image of the picture the camera actually sees projected in full negative size (2 1/4 x 2 1/4).

Next step is to frame the image you see to obtain an interesting arrangement for picture composition. You may find it necessary to take a few steps forward or backward . . . or to raise or lower the camera to achieve a special angle effect.

After you have framed the picture you want, turn the focusing knob until the principal object in your picture image stands out in bright, sharp relief.

Whenever extra sharp, critical focusing is desired, the magnifying glass attached to top panel of viewing hood may be flipped into position over the ground glass image.

FOCUSING . . . *Ground Glass*

Knowing the speed of the film you're using and estimating (or checking with a light meter) the intensity of the light on your subject, you then adjust the shutter to the correct exposure setting and cock the shutter. Check your ground glass once more to make sure of distance and composition, press up on the shutter release trigger

and the picture is yours forever.


THE CIRO-FLEX SPORTSFINDER



The *Ciro-flex Sportsfinder* is a small opening in the back panel of the viewing hood to serve your need for fast-action sports shots. For sharper, clearer action prints, pre-focus on the ground glass as described above using some object where the action is to occur as your focal point.

Then press the front panel of the viewing hood down to the small catch lock on the back panel. Now, instead of looking through the ground glass, you merely raise the camera and "catch" the action through the *Sportsfinder*. If time does not permit pre-focusing on the ground glass, the *Sportsfinder* may be used with the *Ciro-flex Depth-of-Focus Scale System* described on page 11.

FOCUSING . . . *Depth-of Focus System*

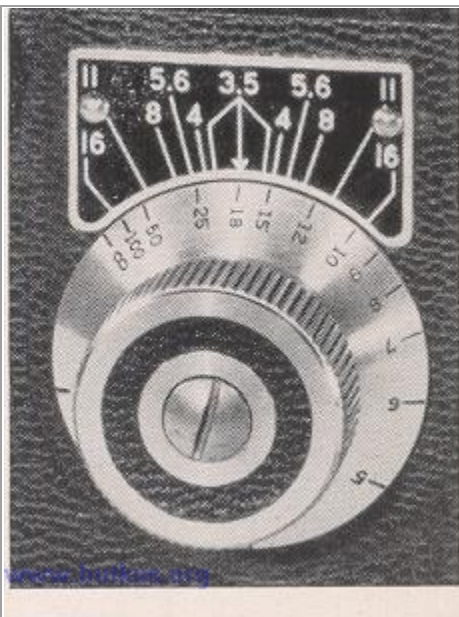

The *Ciro-flex Depth-of-Focus Scale* is located on the camera-body just above the focusing knob. To use this scale, focus the camera as already explained or simply judge the distance between the camera lens and your subject.

After determining the correct exposure setting, read the footage distance on the focusing knob that falls between your diaphragm opening figures appearing on both sides of the zero line on the depth-of-focus scale.

This distance represents a "zone of sharpness" extending in front of and behind the focal point of your picture. Any objects within those limits will be relatively sharp on the negative.

For example, in the picture at right, the focus is set at 18 feet. If the diaphragm is set at $f/16$, the depth of focus-- or "zone of sharpness"-- extends 10 feet in front and 100 feet behind the focal point of your picture. Or, using $f.4$ diaphragm opening with focus set at 18 feet, the depth of focus extends from 15 feet to 22 feet.

THE *Ciro-flex* SNAPSHOT RULE - [click to see chart of snapshot rule](#)

When taking ordinary snapshots, it is not always necessary to focus on the ground glass. By merely using the depth-of-focus scale, you can readily "set" your camera for a "zone of sharpness" and follow this famous *Ciro-flex* snapshot rule:

This rule is presented as a helpful guide to increase the usefulness of your *Ciro-flex*. In practice this rule permits you to carry your camera set at a "zone of sharpness" ready for instant use should a good subject appear unexpectedly. You need only set the shutter speed according to the brightness of the light and the kind of film used to insure good.

RECOMMENDED ACCESSORIES

Ciro-flex Camera Case--



Made of genuine cowhide attractively lined with dubonnet velvet. Designed to permit unrestricted use of the protected camera. Just drop the front cover as shown and you're ready for action.

Cable Release--Cable releases are available for use with your Ciro-flex. They are a valuable accessory for time or bulb exposures where a slight movement of the camera may ruin an excellent picture.

Flash Gun--Any flash attachment of standard make which will fit the Alphax or Rapax Shutters may be used with the Ciro-flex.

Tripod--Any tripod having a 1/4" - 20 thread attachment will fit the Ciro-flex.

Filters--Any well-known make of filters in the 32mm. mount size will fit your Ciro-flex camera. For all practical purposes the medium yellow is recommended.

Portrait Lenses--Your dealer carries a selection of special lenses for fine portrait photography which will bring the image up closer than three feet. These supplementary lenses can be obtained in various focal lengths and should be mounted to fit the 32mm. diameter lens mount.